

Hitch, 2" Receiver, DODGE RAM 1500 w/ CLASS 3 FACTORY BUMPER HITCH

INSTALLATION INSTRUCTIONS

READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLATION

WARNING: Never exceed the vehicle manufacturer's recommended towing capacity.

NOTICE:

- · Always use proper tools and safety equipment to ensure a safe and quality installation.
- Inspection of the trailer hitch should be performed before and after each use to ensure all mounting hardware is tight and related hitch components are secure.
- **WARNING:** Before you begin installation, read all instructions thoroughly.
- **WARNING:** Safety glasses should be worn at all times while installing this product.
- **WARNING:** Failure to adhere to exact torque specifications when securing hardware during the installation process can result in damage to the product or your vehicle. This will void the hitch warranty.

LEVEL OF DIFFICULTY: Easy

Installation difficulty levels are based on time and effort required. They will vary depending on the installer's expertise. Vehicle condition could be a factor in the level of difficulty for a proper installation.

WEIGHT CARRYING CAPACITY

Gross Trailer Weight (GTW)	6,000 lb
Tongue Weight (TW)	600 lb

PARTS LIST


Item	Qty	Description
1	1	FHSCS, 3/4-10 UNC,3-1/4, GRD8,YZ
2	2	HHCS, 1/2-13 UNC, 1-1/2, GR
3	2	Washer, S-CON, 1/2, YZ

WEIGHT DISTRIBUTION CAPACITY

Weight Distribution (WD)	N/A
WD Tongue Weight (WDTW)	N/A

TOOLS REQUIRED

Safety Glasses
3/4" Socket
1/2" Hex bit Socket
Ratchet
Torque Wrench

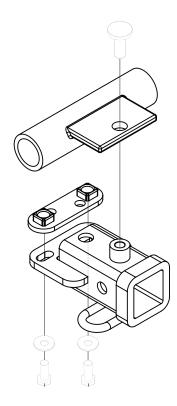

INSTALLATION:

- 1. Remove plug from center of bumper step and insert 3/4" bolt. Save plug for re-installation later.
- 2. Loosely secure using the 1/2" serrated flange nuts.
- 3. Torque 1/2" hardware to 110 ft-lbs



A Winston Products Company TOWSMART.COM WINSTON PRODUCTS, LLC. 30339 Diamond Parkway Cleveland, OH 44139