

## Hitch, 2" Receiver, Nissan Rogue

### INSTALLATION INSTRUCTIONS

**READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLATION**

**⚠️ WARNING:** Never exceed the vehicle manufacturer's recommended towing capacity.

**NOTICE:**

- Always use proper tools and safety equipment to ensure a safe and quality installation.
- Inspection of the trailer hitch should be performed before and after each use to ensure all mounting hardware is tight and related hitch components are secure.

**⚠️ WARNING:** Before you begin installation, read all instructions thoroughly.

**⚠️ WARNING:** Safety glasses should be worn at all times while installing this product.

**⚠️ WARNING:** Failure to adhere to exact torque specifications when securing hardware during the installation process can result in damage to the product or your vehicle. This will void the hitch warranty.

**LEVEL OF DIFFICULTY:** Easy

Installation difficulty levels are based on time and effort required. They will vary depending on the installer's expertise. Vehicle condition could be a factor in the level of difficulty for a proper installation.

**WEIGHT CARRYING CAPACITY**

Gross Trailer Weight (GTW)	3,500 lb
Tongue Weight (TW)	350 lb

**WEIGHT DISTRIBUTION CAPACITY**


Weight Distribution (WD)	N/A
WD Tongue Weight (WDTW)	N/A

**PARTS LIST**

Item	Qty	Description
1	5	HHCS, M12 x 1.25, 35, CL 10.9, YZ
2	5	Washers, S-CON, 1/2, YZ

**TOOLS REQUIRED**

Safety Glasses
8mm Socket
18mm Socket
19mm Socket
8 Socket Extension
Ratchet
Torque Wrench
Straight Head Screwdriver
Phillips Head Screw Driver

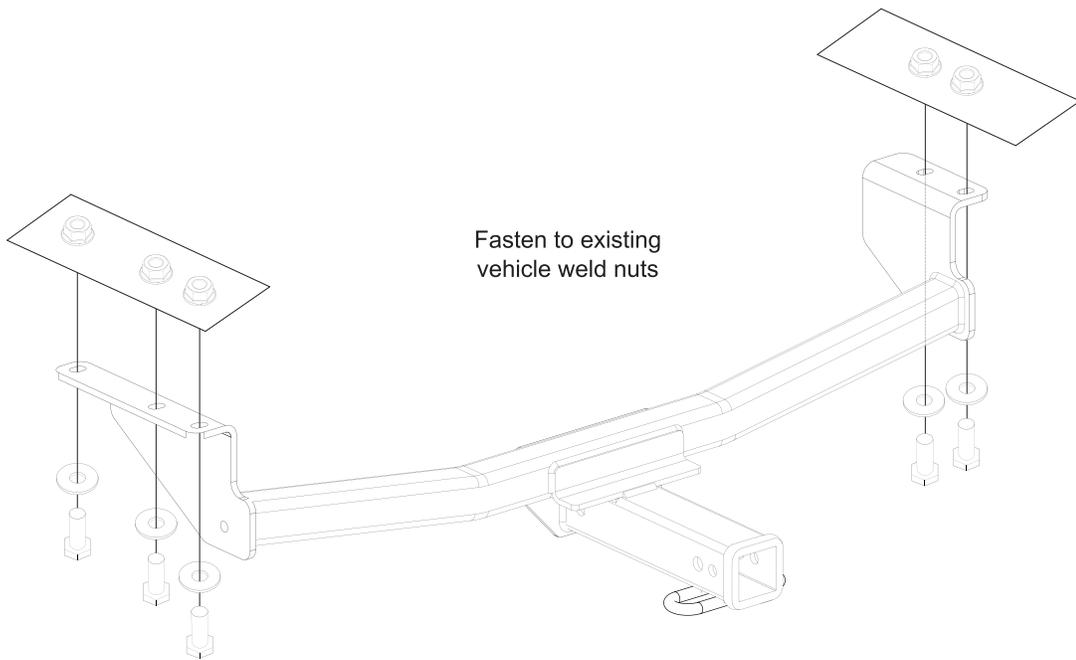

#### INSTALLATION:

1. Using screwdrivers, remove underbody panels if present.
2. Remove tow hook bracket from passenger side frame rail.
3. Lower exhaust for additional working space for hitch install.
4. Lift hitch into position and secure with bolts and washers provided as shown.
5. Torque all bolts to 86 ft-lbs.
6. Return exhaust into original position.

#### FISH WIRE TECHNIQUE

1. Insert the coiled end of the fish wire tool through the mounting hole in the vehicle frame rail and out the access hole.
2. Thread the coiled end of the fish wire through the spacer and thread the bolt into the coil.
3. Kink the wire to keep the spacer separate from the bolt.
4. Pull the spacer and bolt through the frame and out the mounting hole.
5. Keep the fish wire secure to prevent loss of the bolt or spacer inside the frame rail.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT, DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT TOWSMART.COM.

©03/2024



**CUSTOM**

A Winston Products Company  
TOWSMART.COM  
WINSTON PRODUCTS, LLC.  
30339 Diamond Parkway  
Cleveland, OH 44139