

Hitch, 2" Receiver, Hyundai Tucson, Kia Sportage

INSTALLATION INSTRUCTIONS

READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLATION

⚠️WARNING: Never exceed the vehicle manufacturer's recommended towing capacity.

NOTICE:

- Always use proper tools and safety equipment to ensure a safe and quality installation.
- Inspection of the trailer hitch should be performed before and after each use to ensure all mounting hardware is tight and related hitch components are secure.

⚠️WARNING: Before you begin installation, read all instructions thoroughly.

⚠️WARNING: Safety glasses should be worn at all times while installing this product.

⚠️WARNING: Failure to adhere to exact torque specifications when securing hardware during the installation process can result in damage to the product or your vehicle. This will void the hitch warranty.

LEVEL OF DIFFICULTY: Easy

Installation difficulty levels are based on time and effort required. They will vary depending on the installer's expertise. Vehicle condition could be a factor in the level of difficulty for a proper installation.

WEIGHT CARRYING CAPACITY

| | |
|----------------------------|----------|
| Gross Trailer Weight (GTW) | 4,500 lb |
| Tongue Weight (TW) | 675 lb |

WEIGHT DISTRIBUTION CAPACITY

| | |
|--------------------------|----|
| Weight Distribution (WD) | NA |
| WD Tongue Weight (WDTW) | NA |

PARTS LIST

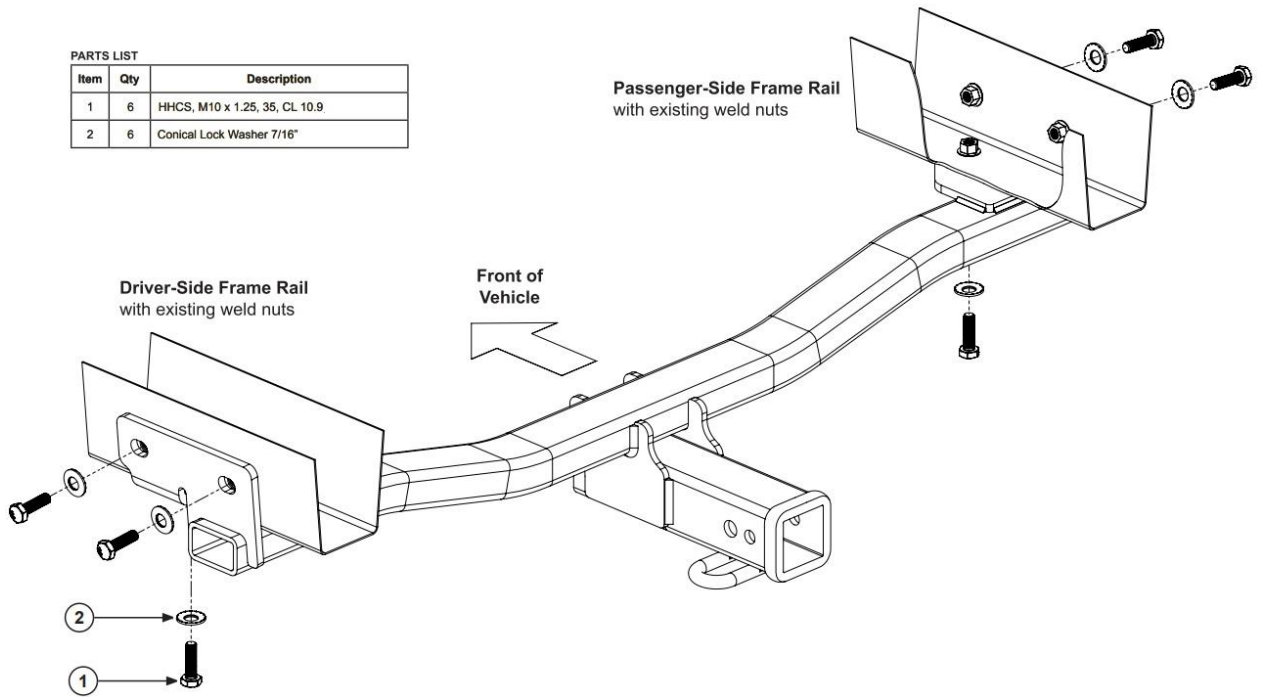
| Item | Qty | Description |
|------|-----|------------------------------------|
| 1 | 6 | Hex Bolt, M12-1.25 x 35mm, CL 10.9 |
| 2 | 6 | Conical Washer, 7/16" |

TOOLS REQUIRED

| |
|------------------------|
| Safety Glasses |
| Ratchet |
| 14mm, 17mm,19mm Socket |
| Torque Wrench |
| Flat head Screwdriver |

PARTS LIST

| Item | Qty | Description |
|------|-----|-------------------------------|
| 1 | 6 | HHCS, M10 x 1.25, 35, CL 10.9 |
| 2 | 6 | Conical Lock Washer 7/16" |

**INSTALLATION:**

1. Use a flathead screwdriver to remove the 4 push fasteners holding the underbody panel.
2. Use a 14mm socket to loosen the three exposed nuts.
3. Lift hitch into position and loosely secure it with 6 M10 bolts and 6 conical washers provided. Tighten all M10 bolts to 48 ft-lbs.

NOTICE: Lowering of exhaust might be needed. Always ensure the exhaust is supported to prevent damage.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT, DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT TOWSMART.COM.

©02/2024



CUSTOM

A Winston Products Company
TOWSMART.COM
WINSTON PRODUCTS, LLC.
30339 Diamond Parkway
Cleveland, OH 44139