

Hitch, 2" Receiver, Subaru Crosstrek

INSTALLATION INSTRUCTIONS

READ ALL WARNINGS AND INSTRUCTIONS BEFORE INSTALLATION

⚠️WARNING: Never exceed the vehicle manufacturer's recommended towing capacity.

NOTICE:

- Always use proper tools and safety equipment to ensure a safe and quality installation.
- Inspection of the trailer hitch should be performed before and after each use to ensure all mounting hardware is tight and related hitch components are secure.

⚠️WARNING: Before you begin installation, read all instructions thoroughly.

⚠️WARNING: Safety glasses should be worn at all times while installing this product.

⚠️WARNING: Failure to adhere to exact torque specifications when securing hardware during the installation process can result in damage to the product or your vehicle. This will void the hitch warranty.

LEVEL OF DIFFICULTY: Easy

Installation difficulty levels are based on time and effort required. They will vary depending on the installer's expertise. Vehicle condition could be a factor in the level of difficulty for a proper installation.

WEIGHT CARRYING CAPACITY

Gross Trailer Weight (GTW)	4,500 lb
Tongue Weight (TW)	675 lb

WEIGHT DISTRIBUTION CAPACITY

Weight Distribution (WD)	NA
WD Tongue Weight (WDTW)	NA

PARTS LIST


Item	Qty	Description
1	4	Carriage Bolt, ½ -13 x 1-1/2
2	4	.250 x 1.00 x 3.00" Square Hole Spacer
3	2	.250 x 1.50 x 2.00" Round Hole Spacer
4	4	Hex Flange Nut
5	4	½" Fishwire

TOOLS REQUIRED

Safety Glasses
Ratchet
¾ Socket
Torque Wrench
Die Grinder Tool

PARTS LIST

Item	Qty	Description
1	4	Carriage Bolt, 1/2-13 UNC, 1-1/2
2	4	.250 x 1.00 x 3.00" Rectangular Washer
3	2	.250 x 1.50 x 2.00" Spacer
4	4	Flange Nut, 1/2-13 UNC
5	4	1/2" Fish Wire

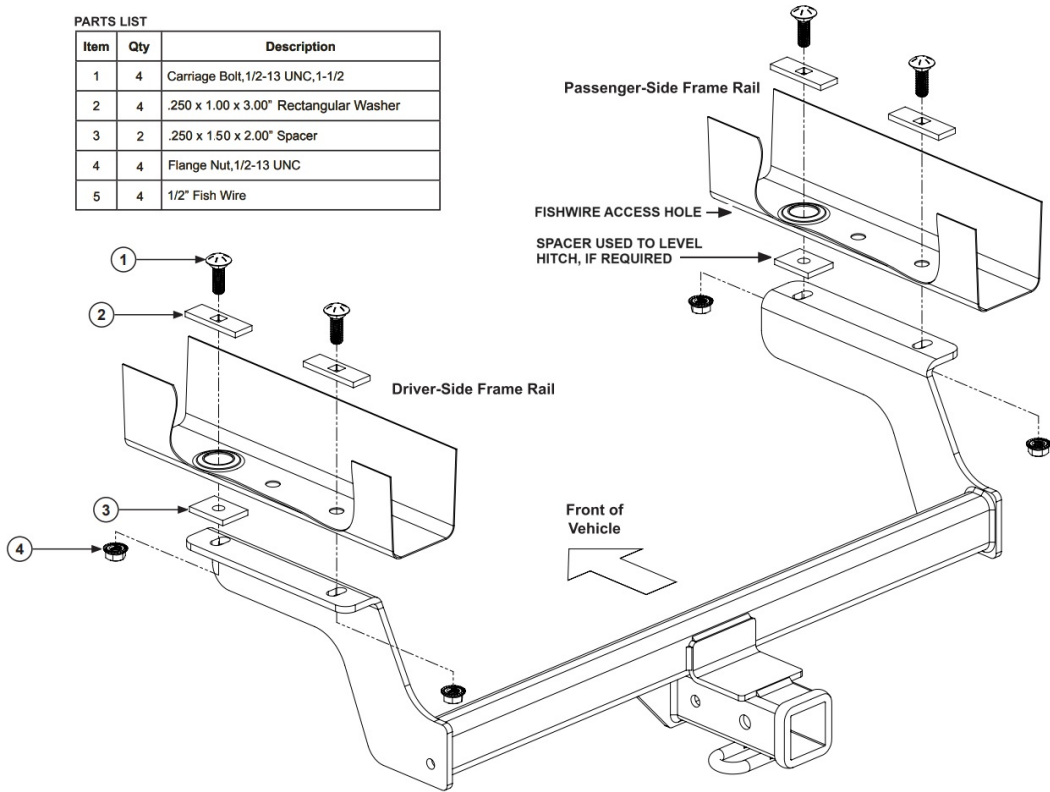

INSTALLATION:

1. Remove two rubber plugs from each frame rail and provide to the vehicle owner (leave center plugs in the frame).
2. Enlarge access holes and fishwire 1/2" carriage bolts and spacers into position and reverse Fishwire the remaining 1/2" carriage bolts and spacers into the access hole. Leave fish wires attached.
3. Lift hitch into position using spacers to level hitch as necessary. Remove fish wires and loosely install four 1/2" hex flange nuts.

NOTICE: Do not push the bolts into the frame.

4. Torque all 1/2" fasteners to 110 lb-ft.

FISH WIRE TECHNIQUE

1. Insert the coiled end of the fish wire tool through the mounting hole in the vehicle frame rail and out the access hole.
2. Thread the coiled end of the fish wire through the spacer and thread the bolt into the coil.
3. Kink the wire to keep the spacer separate from the bolt.
4. Pull the spacer and bolt through the frame and out the mounting hole.
5. Keep the fish wire secure to prevent loss of the bolt or spacer inside the frame rail.

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT, DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT TOWSMART.COM.



A Winston Products Company
 TOWSMART.COM
 WINSTON PRODUCTS, LLC.
 30339 Diamond Parkway
 Cleveland, OH 44139