

CONNECTOR, 6-Round Vehicle End

INSTALLATION INSTRUCTIONS

⚠ WARNING: The attachment and installation of this product is beyond the control of Winston Products, LLC. Winston Products, LLC is not responsible for the attachment or the installation of this product. Winston Products, LLC is not liable for damages and/or injuries that are the result of improper use/attachment or are the result of use beyond the intended towing application. The liability of this product is limited to the purchase price if it proves to be defective in material and/or workmanship. Any and all warranties, explicit or implied, are void if the product is damaged or worn.

WIRE IDENTIFICATION:

GD = Ground

TM = Taillight

LT = Left Turn/Brake

RT = Right Turn/Brake


AX = Auxiliary (Ensure Connection to Fuse Block or Fused Battery Lead, 20 AMP)

EB = Electric Brakes

1. Loosen set screw (A) on the connector housing and remove the socket from the housing. Route wiring through the socket metal housing.
2. Strip wires ¼" and tightly secure them to the appropriate socket terminal location per the wire identification chart above.
3. Align the socket keyway with the housing key and insert the socket back into housing. Tighten set screw (A).

NOTES:

Locate wires and pin location by function on tow vehicle or trailer. Color coding is not standard among manufacturers.

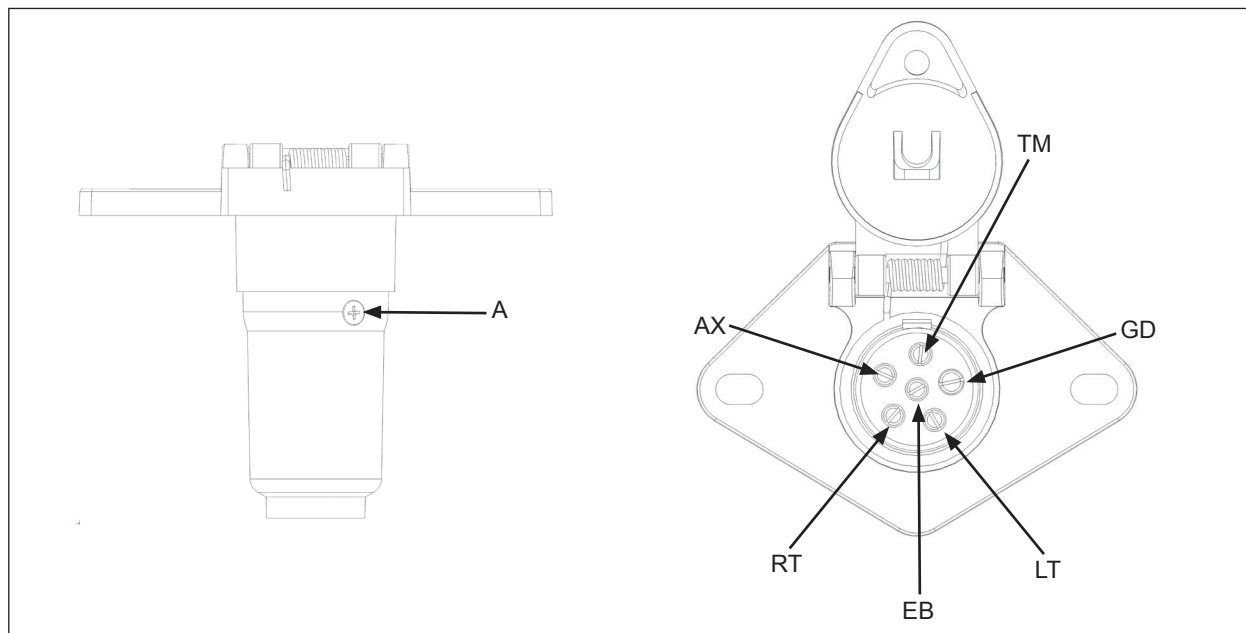

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.



A Winston Products Company
TOWSMART.COM
WINSTON PRODUCTS, LLC.
30339 Diamond Parkway
Cleveland, OH 44139