

CONNECTOR, 4-Flat to 7-Blade Vehicle End

INSTALLATION INSTRUCTIONS

⚠ WARNING: The attachment and installation of this product is beyond the control of Winston Products, LLC. Winston Products, LLC is not responsible for the attachment or the installation of this product. Winston Products, LLC is not liable for damages and/or injuries that are the result of improper use/attachment or are the result of use beyond the intended towing application. The liability of this product is limited to the purchase price if it proves to be defective in material and/or workmanship. Any and all warranties, explicit or implied, are void if the product is damaged or worn.

WIRE IDENTIFICATION:

GND = Ground

TM = Taillight

LT = Left Turn/Brake

RT = Right Turn/Brake

AUX = Auxiliary


EB = Electric Brakes

BU = Reverse

1. Apply dielectric grease to the terminals and plug the 4-flat into existing 4-flat on the tow vehicle.
2. Attach ground (white wire with eyelet) to a clean metal surface free from rust and dirt.
3. Attach brake (blue wire with butt splice) to an electric brake control.
4. Attach backup (purple wire with butt splice) to the reverse/backup function.
5. Attach auxiliary (black wire with butt splice) to a "fused" power source such as the fuse block or direct to the vehicle battery positive terminal. It is important that this line is sufficiently fused.

NOTE:

Locate wires and pin location by function on tow vehicle or trailer. Color coding is not standard among manufacturers.

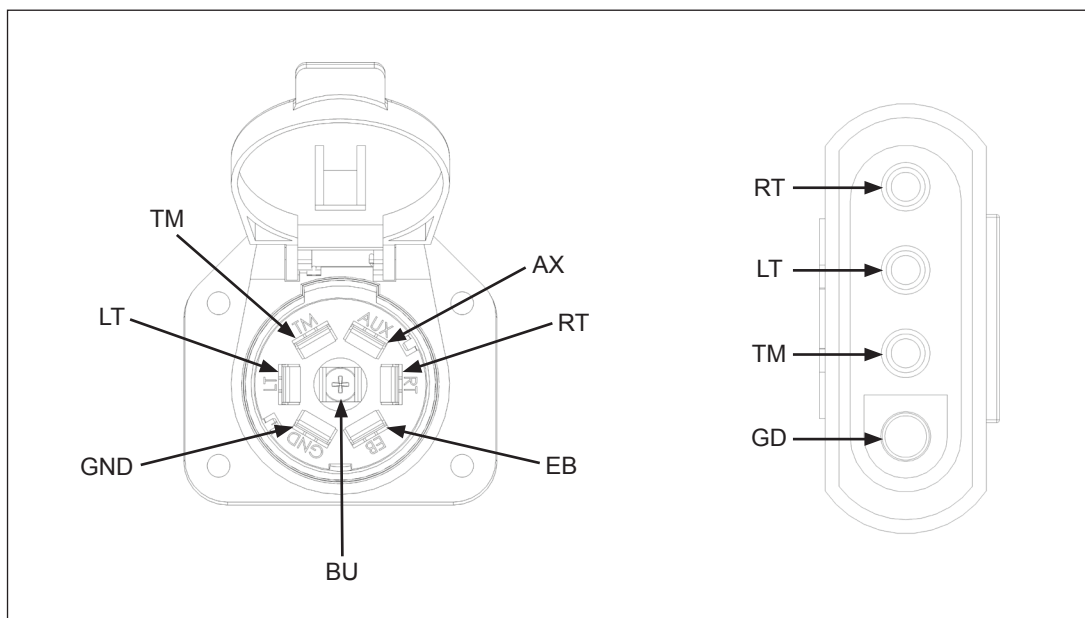

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.



A Winston Products Company
TOWSMART.COM
WINSTON PRODUCTS, LLC.
30339 Diamond Parkway
Cleveland, OH 44139