

CONNECTOR, 4-Flat Trailer End Y Harness, 25 FT

INSTALLATION INSTRUCTIONS

⚠ WARNING: The attachment and installation of this product is beyond the control of Winston Products, LLC. Winston Products, LLC is not responsible for the attachment or the installation of this product. Winston Products, LLC is not liable for damages and/or injuries that are the result of improper use/attachment or are the result of use beyond the intended towing application. The liability of this product is limited to the purchase price if it proves to be defective in material and/or workmanship. Any and all warranties, explicit or implied, are void if the product is damaged or worn.

WIRE IDENTIFICATION:

GD = Ground, White

TM = Taillight, Brown

LT = Left Turn/Brake, Yellow


RT = Right Turn/Brake, Green

1. Route on trailer each wire of the Y-harness directly to the trailer taillight. Leave approximately 18 inches of slack between the trailer and tow vehicle to allow for turning.
2. Securely fasten Y-harness to trailer.
3. Attach each wire to the trailer taillight using the wire identification chart.
4. Attach the ground wire directly to the trailer frame.
5. Apply dielectric grease to 4-flat terminals to prevent corrosion.
6. Have trailer coupler attached to the hitch ball on the tow vehicle. Plug the completed harness into the tow vehicle and test all functions.

NOTES:

Locate wires and pin location by function on tow vehicle or trailer. Color coding is not standard among manufacturers.

The Y-Harness design provides taillight wire routing directly to each trailer taillight.

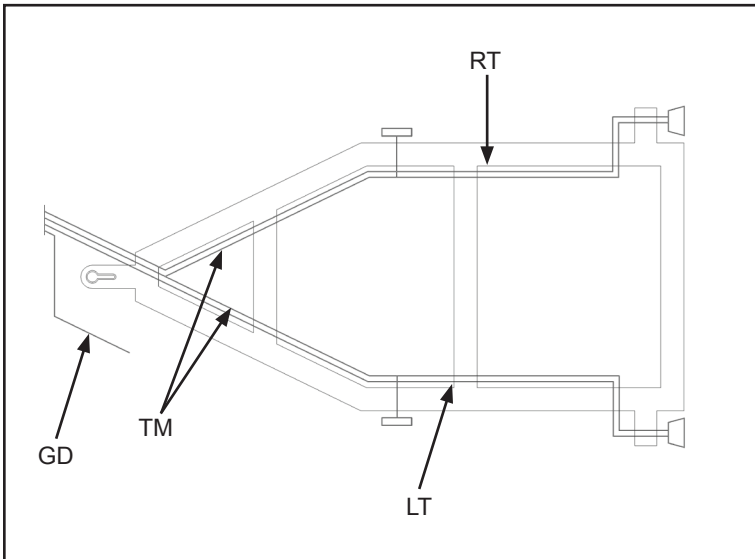

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.