

CONNECTOR, 7-Blade Jacketed Cable Trailer End with LED Testing

INSTALLATION INSTRUCTIONS

⚠ WARNING: The attachment and installation of this product is beyond the control of Winston Products, LLC. Winston Products, LLC is not responsible for the attachment or the installation of this product. Winston Products, LLC is not liable for damages and/or injuries that are the result of improper use/attachment or are the result of use beyond the intended towing application. The liability of this product is limited to the purchase price if it proves to be defective in material and/or workmanship. Any and all warranties, explicit or implied, are void if the product is damaged or worn.

WIRE IDENTIFICATION (SAE AUTO CODE):

GD = Ground, White

TM = Taillight, Brown

LT = Left Turn/Brake, Yellow

RT = Right Turn/Brake, Green

AX = Auxiliary, Red or Black

EB = Electric Brakes, Blue


BU = Reverse, Purple (Center Pin Location)

1. Attach each wire to the corresponding/same function on the vehicle and trailer using the wire identification chart.
2. Attach trailer coupler to the hitch ball on the tow vehicle. Plug the completed harness into the tow vehicle.

NOTES:

Locate wires and pin location by function on tow vehicle or trailer. Color coding is not standard among manufacturers.

The 7-blade jacketed cable utilizes the Auto Industry wiring code. It's pre-wired and provides protection to the wires from the jacketed sleeving. LED test lights will illuminate upon activation of each trailer function verifying correct electrical continuity.

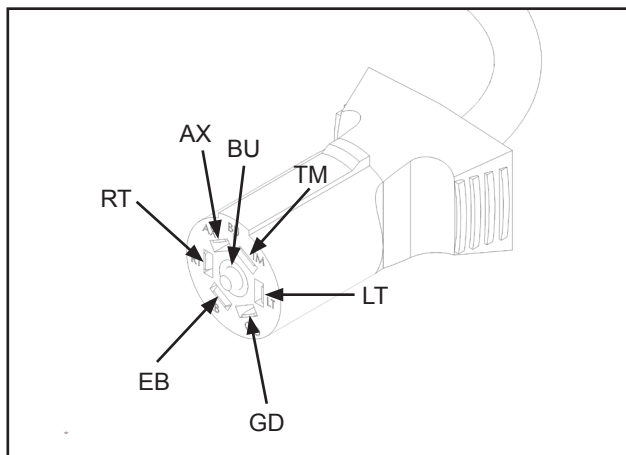

IF YOU EXPERIENCE ANY PROBLEMS WITH YOUR TOWSMART PRODUCT DO NOT RETURN THE UNIT TO THE RETAILER FROM WHICH IT WAS PURCHASED. INSTEAD, PLEASE CALL 1-844-295-9215 FOR ASSISTANCE WITH ANY PROBLEMS. WARRANTY INFORMATION IS AVAILABLE UPON REQUEST AND CAN BE FOUND ONLINE AT WWW.TOWSMART.COM.



A Winston Products Company
TOWSMART.COM
WINSTON PRODUCTS, LLC.
30339 Diamond Parkway
Cleveland, OH 44139