



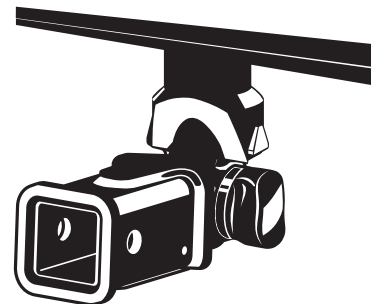


Part Number: 200854

Mercedes GLE (V167)

10/2018 -

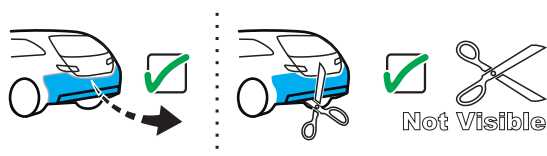

☒ AdBlue

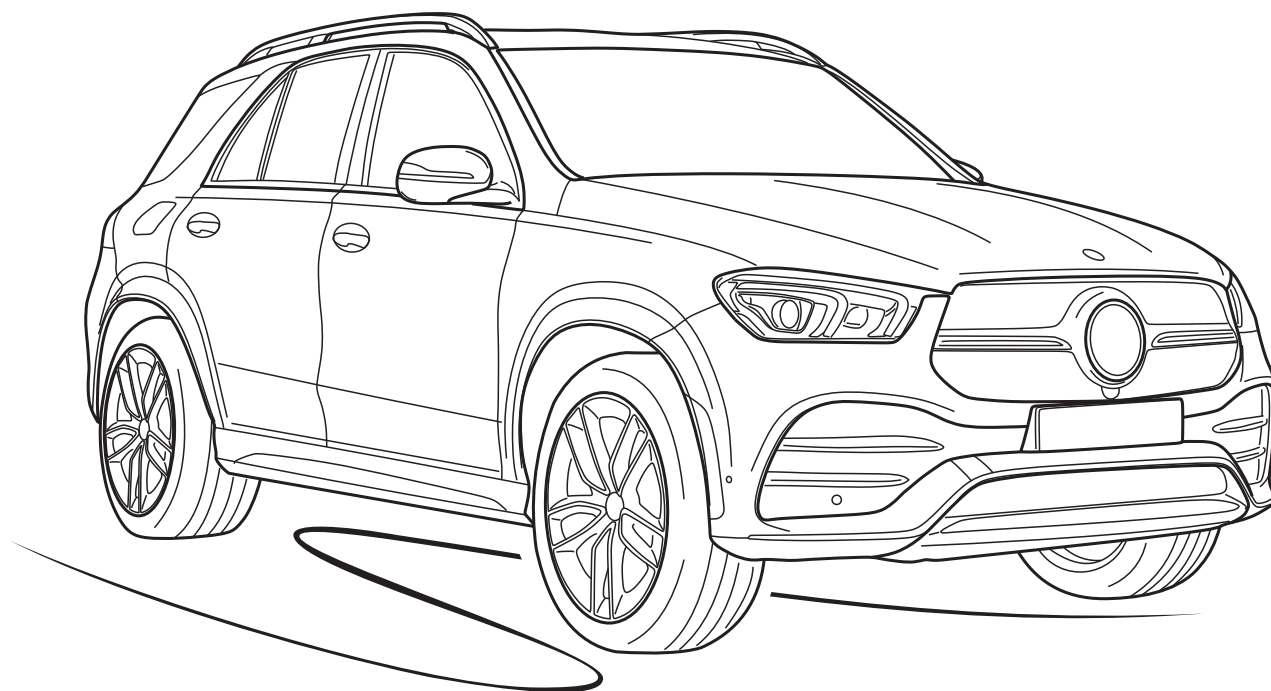



Check our webpage for the latest and a full-color copy of this fitting instruction.

www.oris-automotive.com/en/

Version: 03
Date: 08-05-2025



THESE INSTRUCTIONS MUST BE GIVEN TO THE END USER

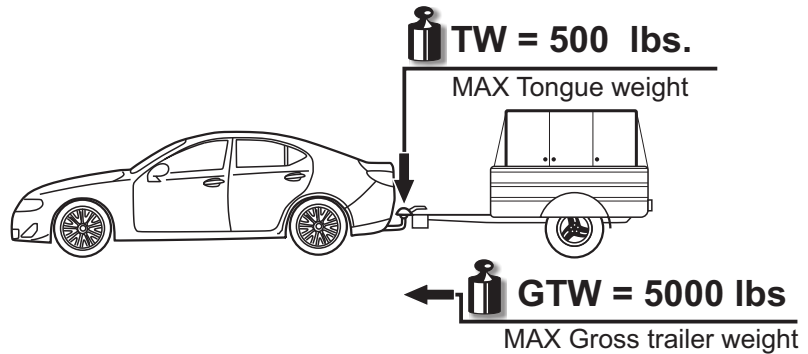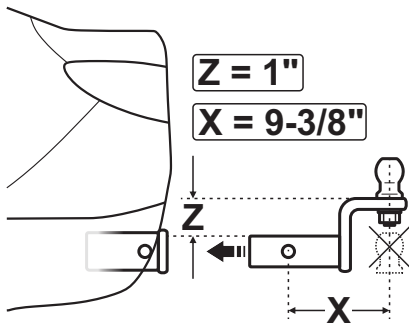

Never exceed the vehicle or the hitch manufacturer's recommended towing capacity and tongue weight.



IMPORTANT SAFETY NOTICE FOR HITCH INSTALLERS AND CUSTOMERS

Read all installation, operating and safety instructions along with all labels before installing or using this product. Failure to comply with the safety information could result in serious injury or death.



www.oris-automotive.com/en/safety/



WARNING: This product can expose you to chemicals including carbon black, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov



WARNING: Do not perform any installation or towing procedures without fully understanding the correct tools and actions for all steps. Call for support if needed.



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide/

Legend / Légende / Leyenda



US Attention
F Attention
E Atención




US Incorrect
F Incorrect
E Incorrecto



US Correct
F Correct
E Correcto




US Inspect
F Examiner
E Revise



US In both sides
F Tous les deux côtés
E En ambos lados



US Manually
F À la main
E A mano



US Only 2 persons may carry out
F Toujours s'y mettre de deux
E Operación que requiere dos personas



US Remove
F Rebuter
E Tratamiento de residuos



US Location/Position
Arrow
F Flèche de Position
E Flecha de posición



US Movement Arrow
F Flèche de mouvement
E Flecha de movimiento




US Protect it against corrosion
F Protéger contre la corrosion
E Proteger contra la corrosión



US Electrical connection
F Connexion électrique
E Conexión eléctrica


Tools Required / Outils requis / Herramientas requeridas

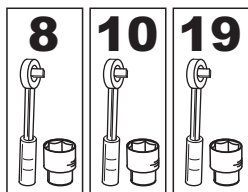

**RATCHET
WITH
SOCKET**



**CUTTING
TOOL**



**PLASTIC
PRY**



**TORQUE WRENCH
WITH SOCKET 10, 17, 19, 22**

Safety / Sécurité / Seguridad

Should be worn at all times
while installing this product.



Il doit être porté en permanence
lors de l'installation de ce produit.

Debe llevarse en todo momento
mientras se instala este producto.




Assembly / Assemblage / Montage


Mounting time





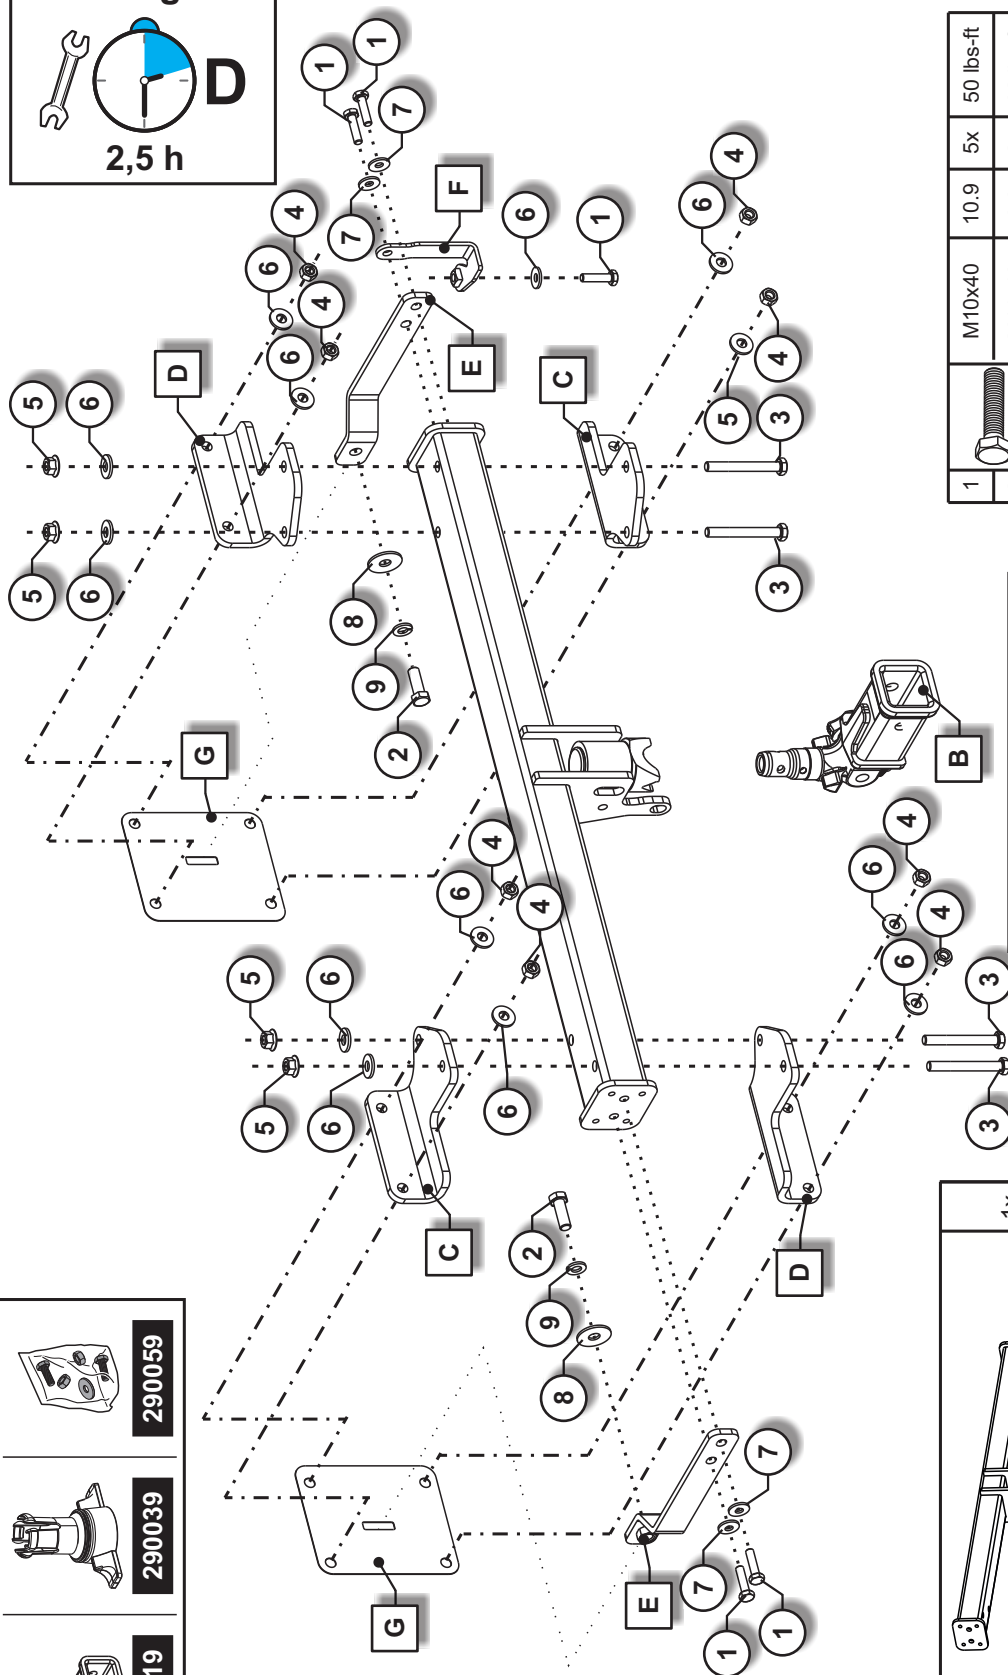
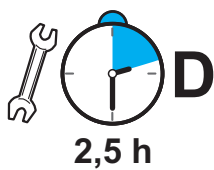






1		M10x40	10.9	5x	50 lbs-ft
2		M14x40	8.8	2x	92 lbs-ft
3		M12x100	10.9	4x	86 lbs-ft
4		M12	10	8x	86 lbs-ft
5		M12	10	4x	86 lbs-ft
6		13x30x3,2		12x	
7		10x27x2,8		5x	
8		M14		2x	
9		M14		2x	






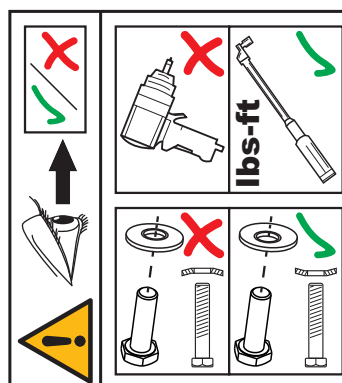








A		1x			
B		2x	E	1x	
C		1x	F	2x	
D		2x	G	2x	

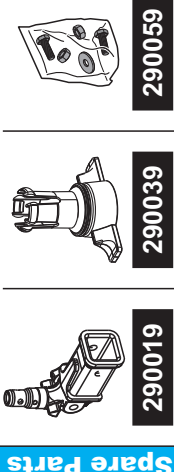

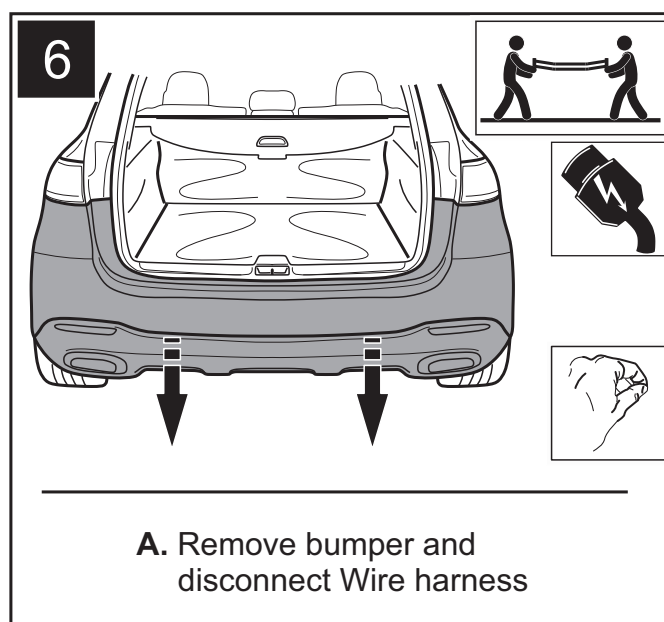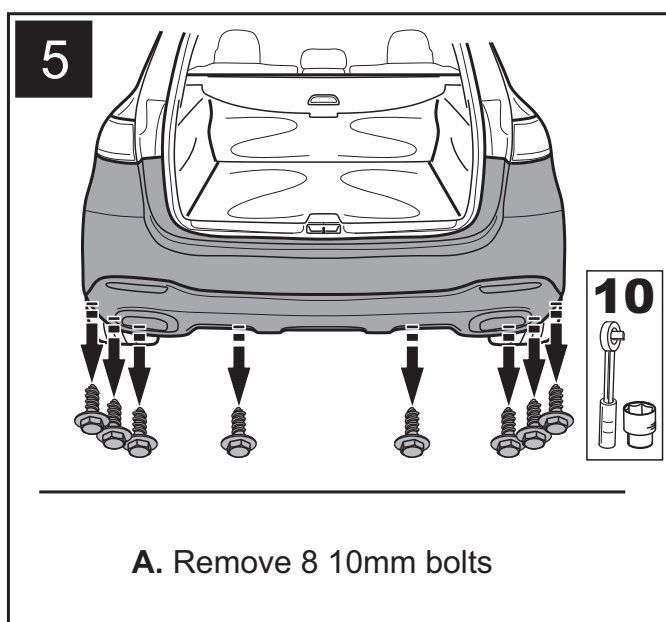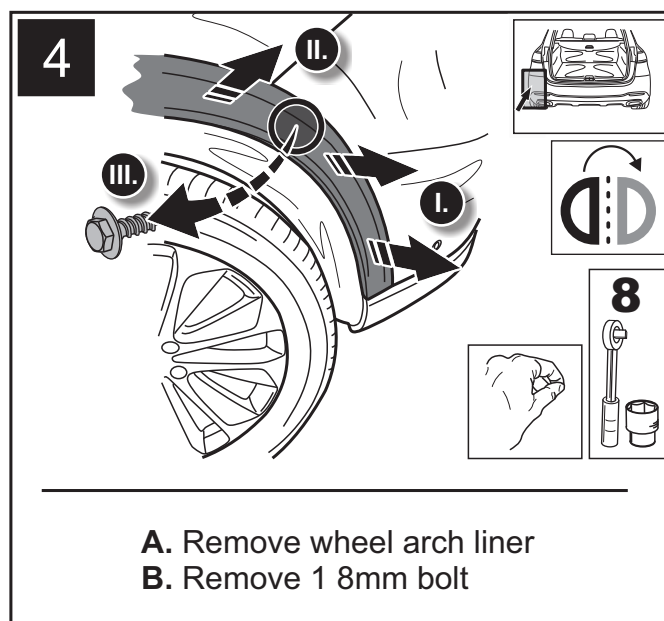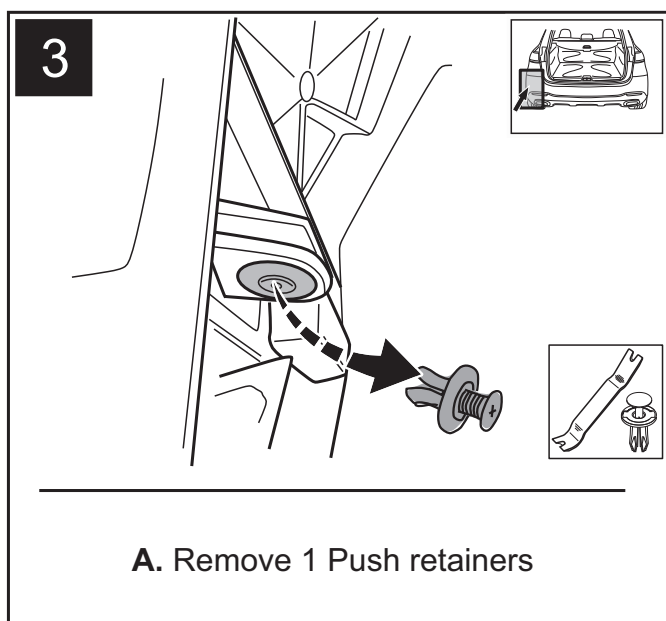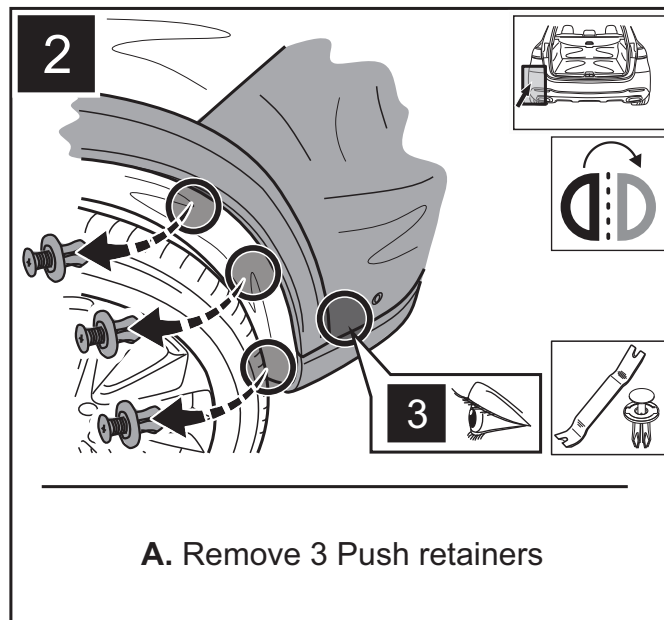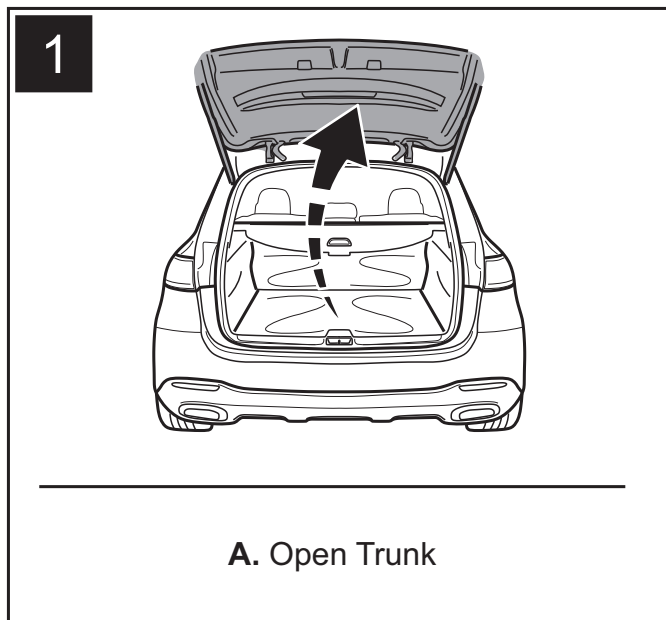


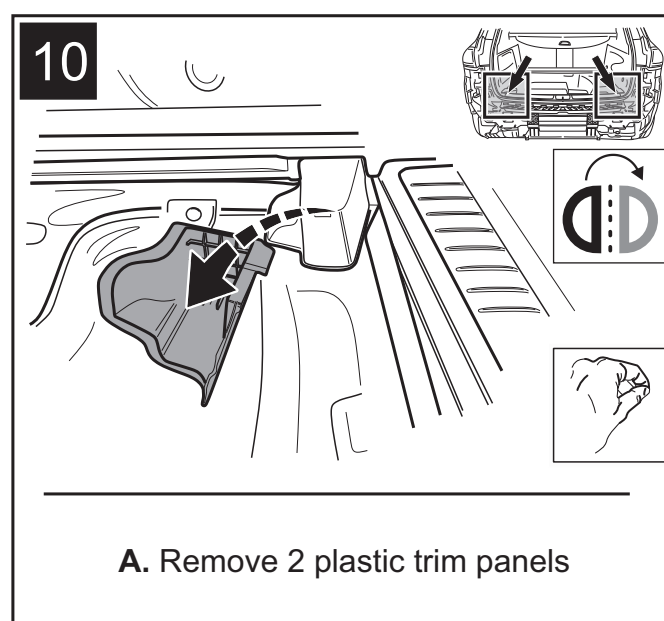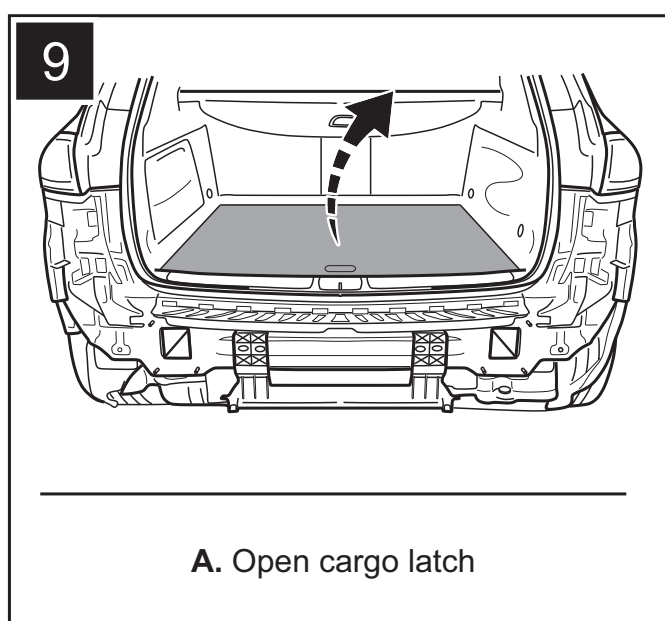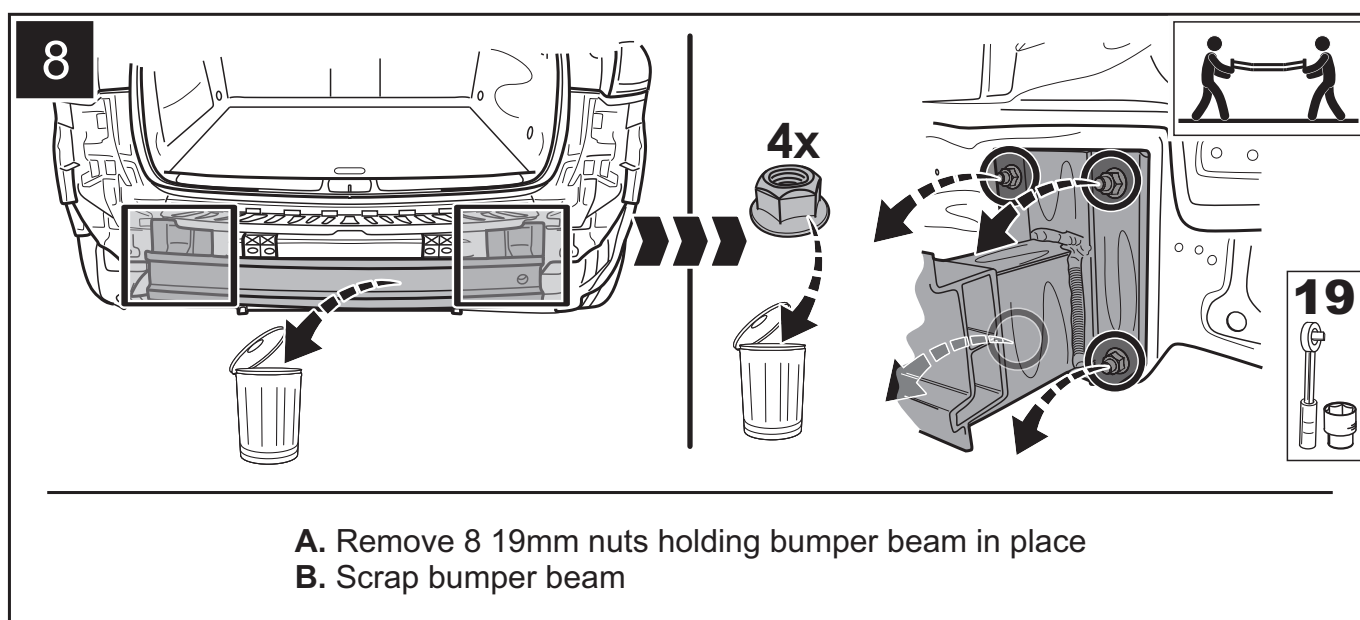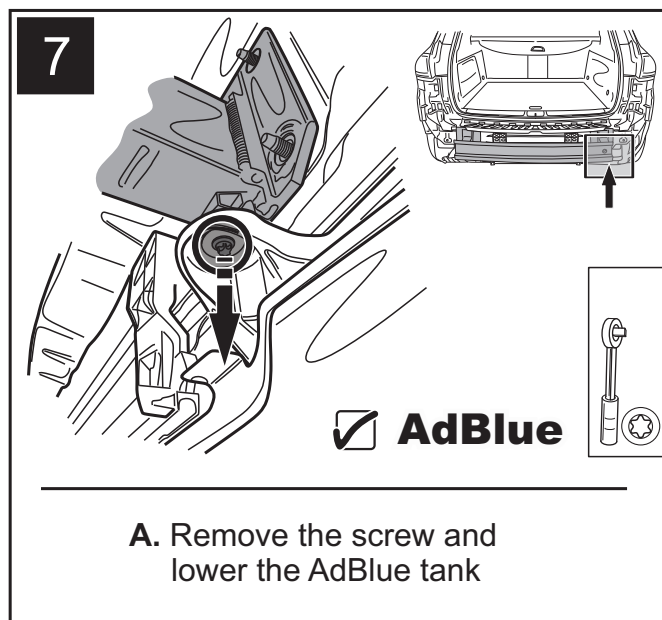

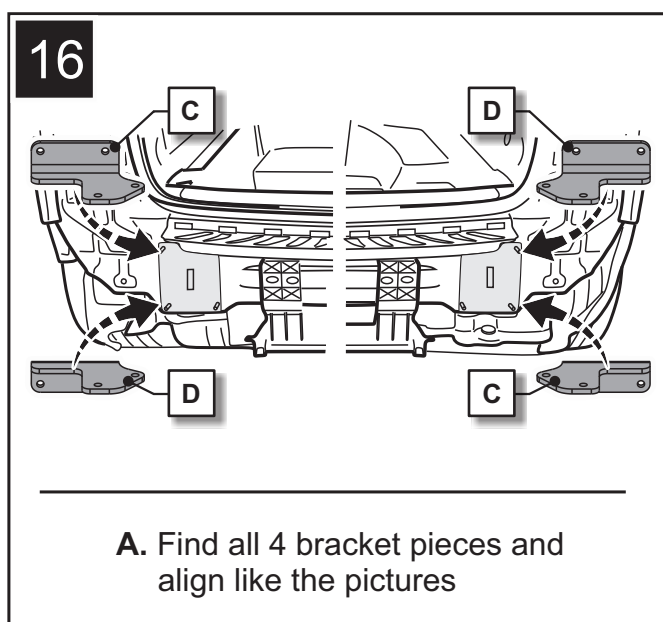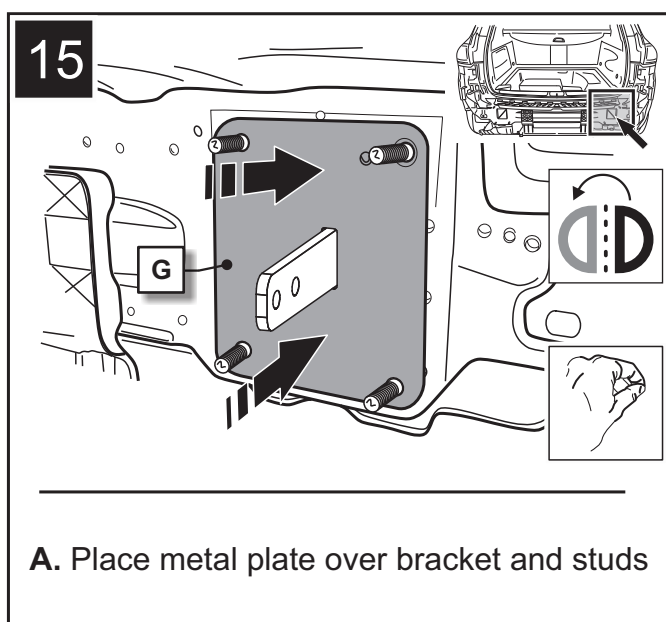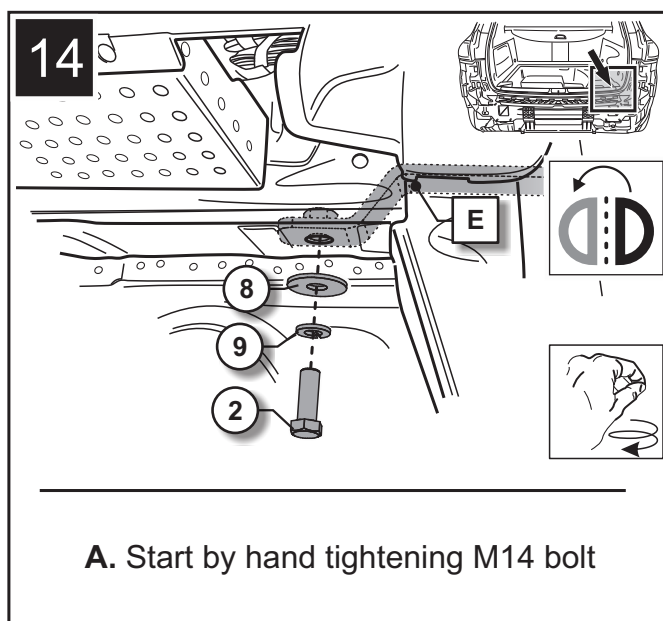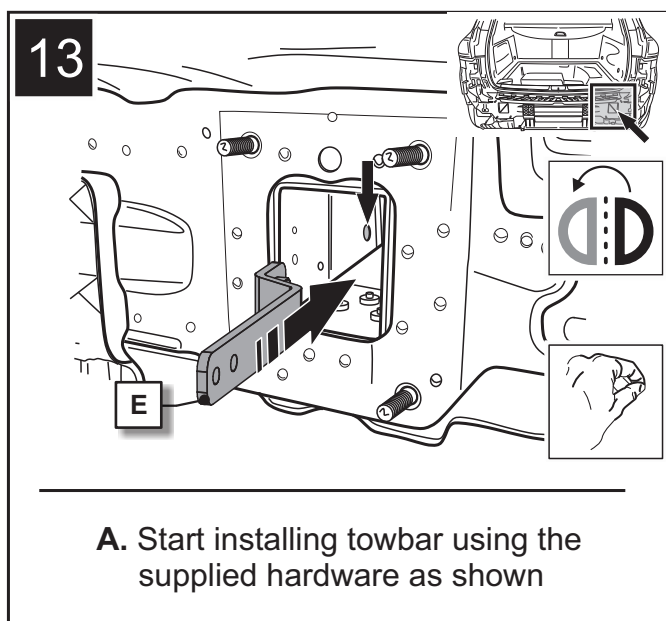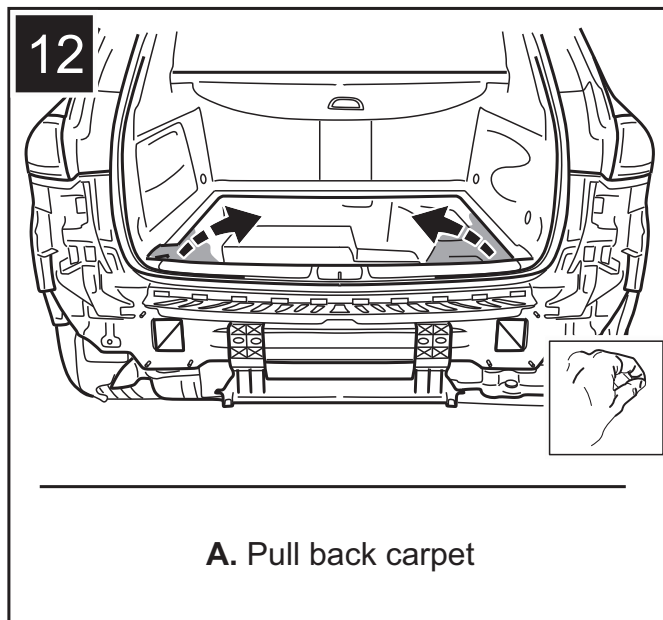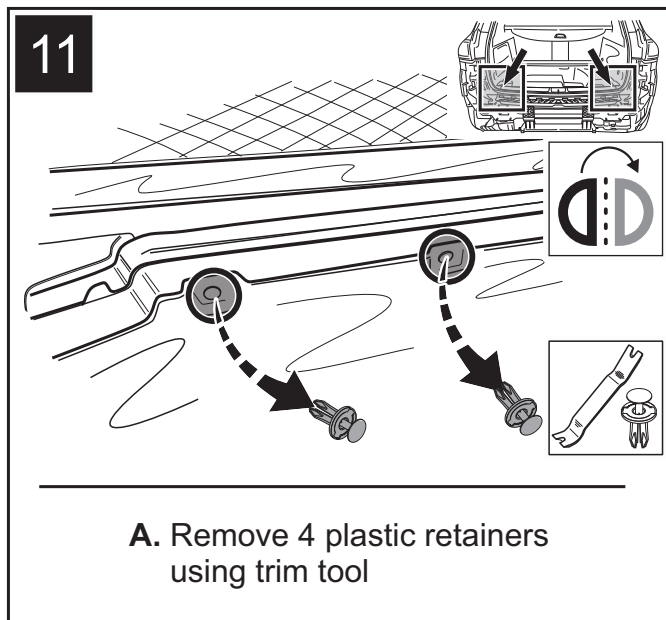

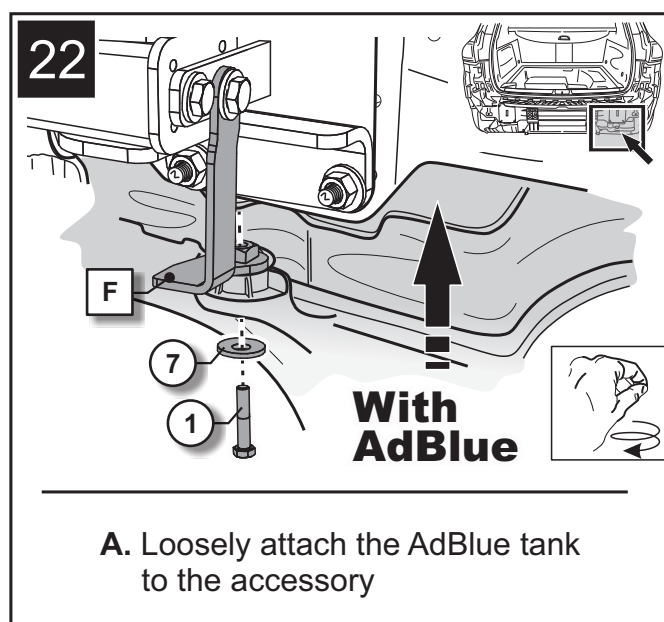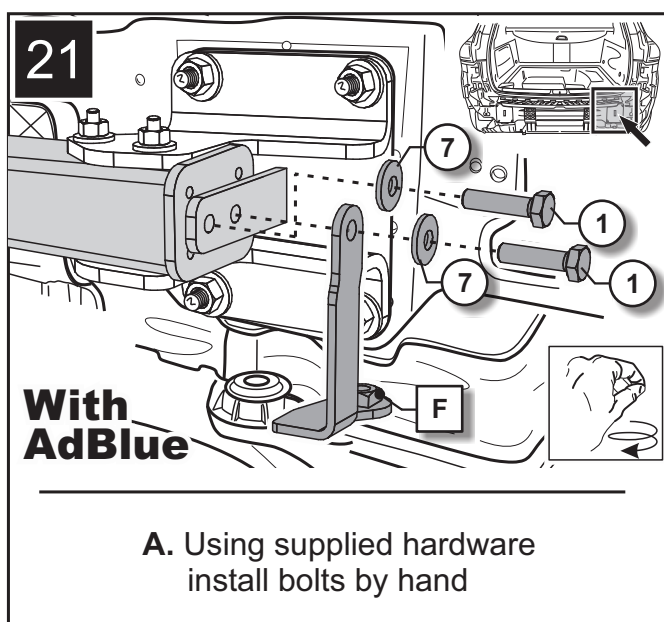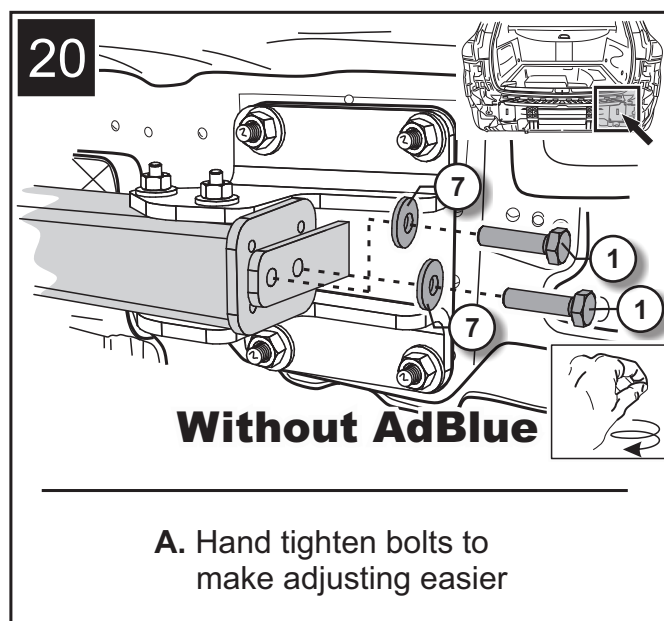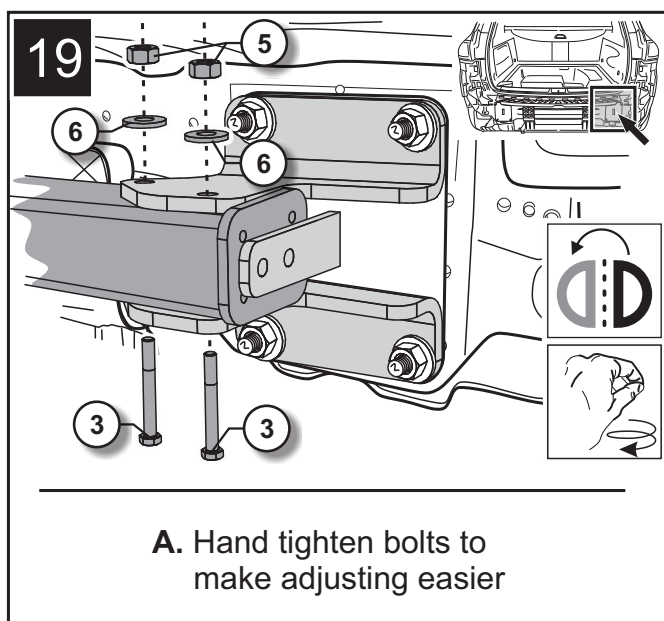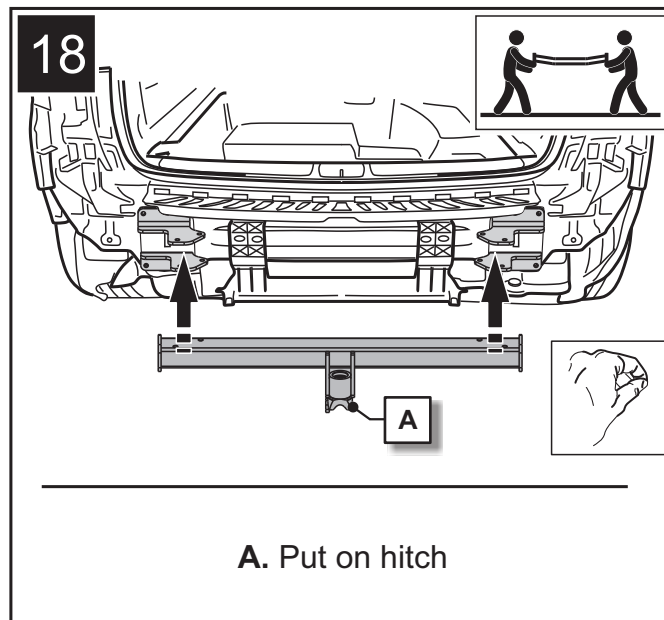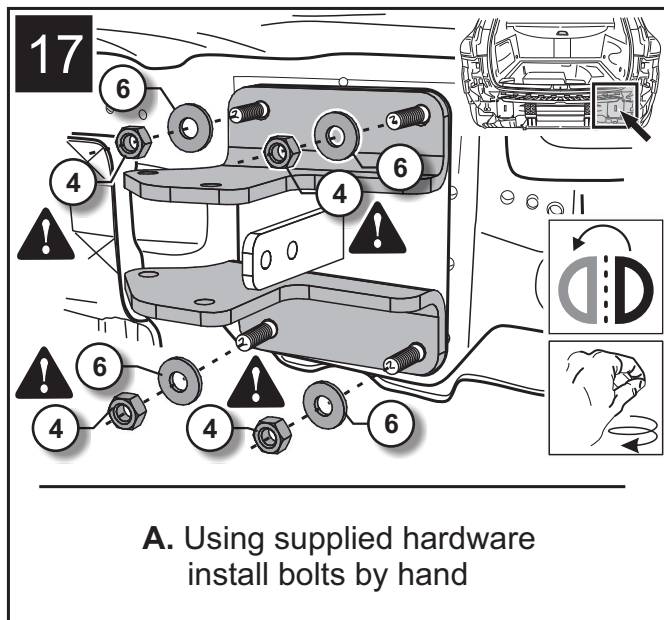


23

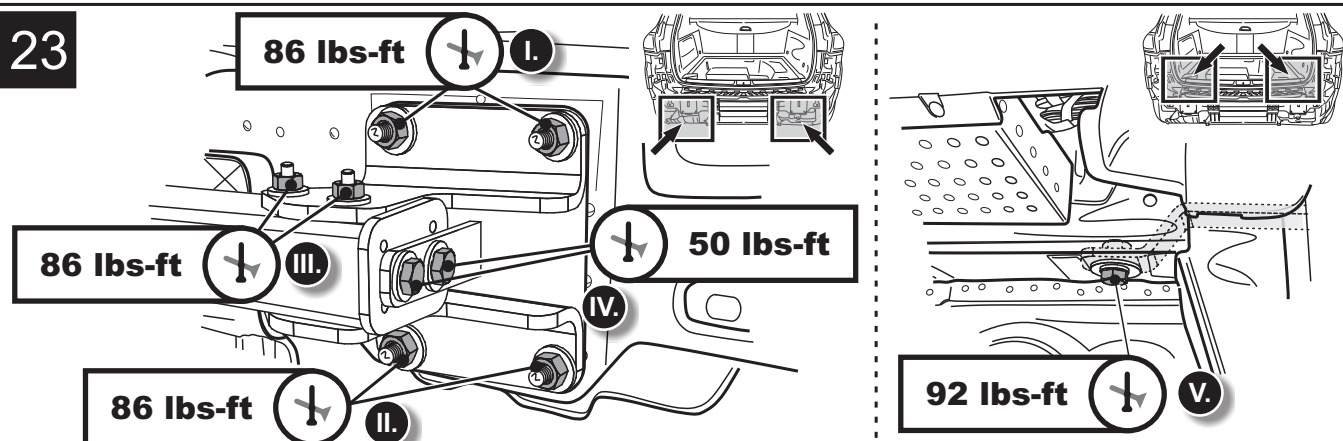


A. Tighten all bolts down to the provided specifications

24

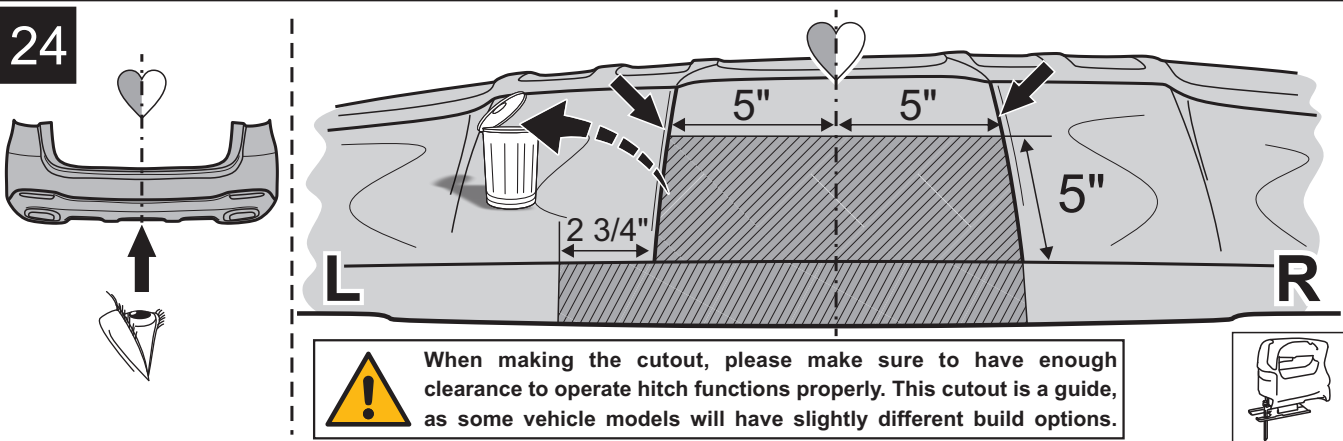

A. Make cutout in bumper using tool of choice (Dremel, oscillating tool, etc.) and diagram provided

25

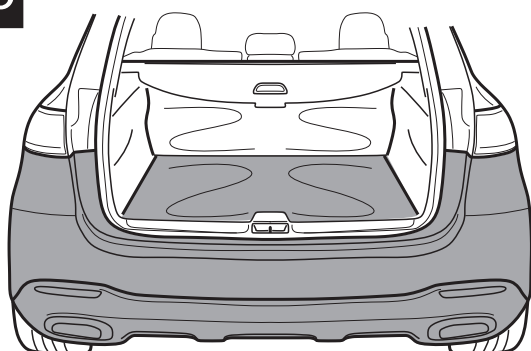

12 → 9 6 → 1

A. Reattach the bumper and all removed parts in the reverse order it was taken off from step 12 to step 9 and from step 6 to step 1.

ORIS
ACPS

HELPLINE



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide

ORIS
ACPS