


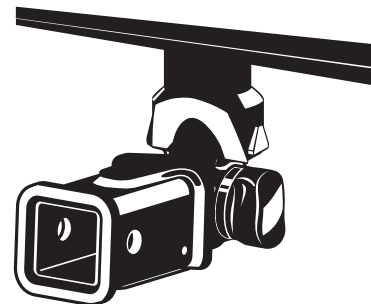

Part Number: 200984


Instrucciones de montaje — Instruction de montage — Fitting instruction

BMW 4 Gran Coupé (G26)

07/2021 -


BMW i4 (G26)

11/2021 -

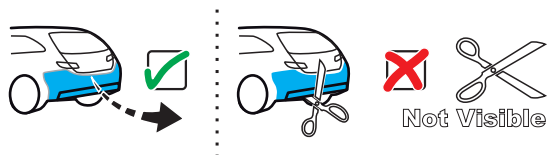

BMW 4 Convertible (G23)


04/2021 -

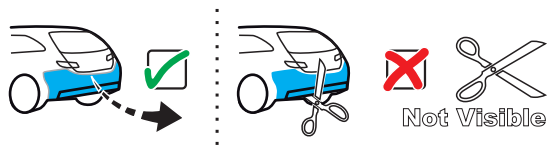

✗ G83 M4 Convertible

BMW 2 Coupé (G42)

04/2021 -

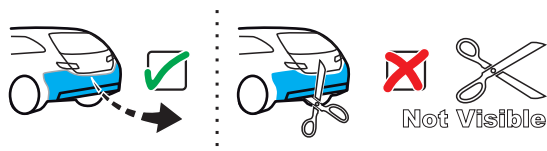

✗ G87 M2




Check our webpage for the latest and a full-color copy of this fitting instruction.

www.oris-automotive.com/en/

Version: 04
Date: 08-05-2025



THESE INSTRUCTIONS MUST BE GIVEN TO THE END USER

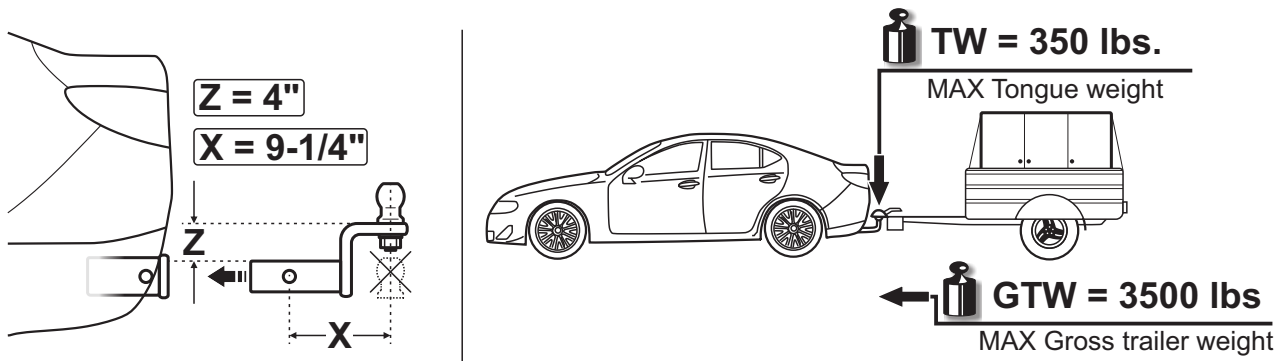

Never exceed the vehicle or the hitch manufacturer's recommended towing capacity and tongue weight.



IMPORTANT SAFETY NOTICE FOR HITCH INSTALLERS AND CUSTOMERS

Read all installation, operating and safety instructions along with all labels before installing or using this product. Failure to comply with the safety information could result in serious injury or death.



www.oris-automotive.com/en/safety/



WARNING: This product can expose you to chemicals including carbon black, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov



WARNING: Do not perform any installation or towing procedures without fully understanding the correct tools and actions for all steps. Call for support if needed.



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide/

Legend / Légende / Leyenda



US Attention
F Attention
E Atención



US Incorrect
F Incorrect
E Incorrecto



US Correct
F Correct
E Correcto




US Inspect
F Examiner
E Revise



US In both sides
F Tous les deux côtés
E En ambos lados



US Manually
F À la main
E A mano



US Only 2 persons may carry out
F Toujours s'y mettre de deux
E Operación que requiere dos personas



US Remove
F Rebuter
E Tratamiento de residuos



US Location/Position
Arrow
F Flèche de Position
E Flecha de posición



US Movement Arrow
F Flèche de mouvement
E Flecha de movimiento




US Protect it against corrosion
F Protéger contre la corrosion
E Proteger contra la corrosión




US Electrical connection
F Connexion électrique
E Conexión eléctrica


Tools Required / Outils requis / Herramientas requeridas

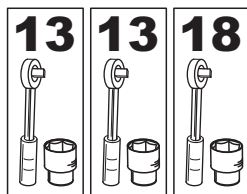

**RATCHET
WITH
SOCKET**




TORX



**PLASTIC
PRY**



**CUTTING
TOOL**

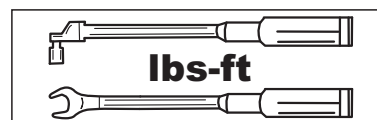

**TORQUE WRENCH
WITH SOCKET 10, 13, 17, 19**

Safety / Sécurité / Seguridad

Should be worn at all times
while installing this product.



Il doit être porté en permanence
lors de l'installation de ce produit.

Debe llevarse en todo momento
mientras se instala este producto.




Assembly / Assemblage / Montage

Mounting time

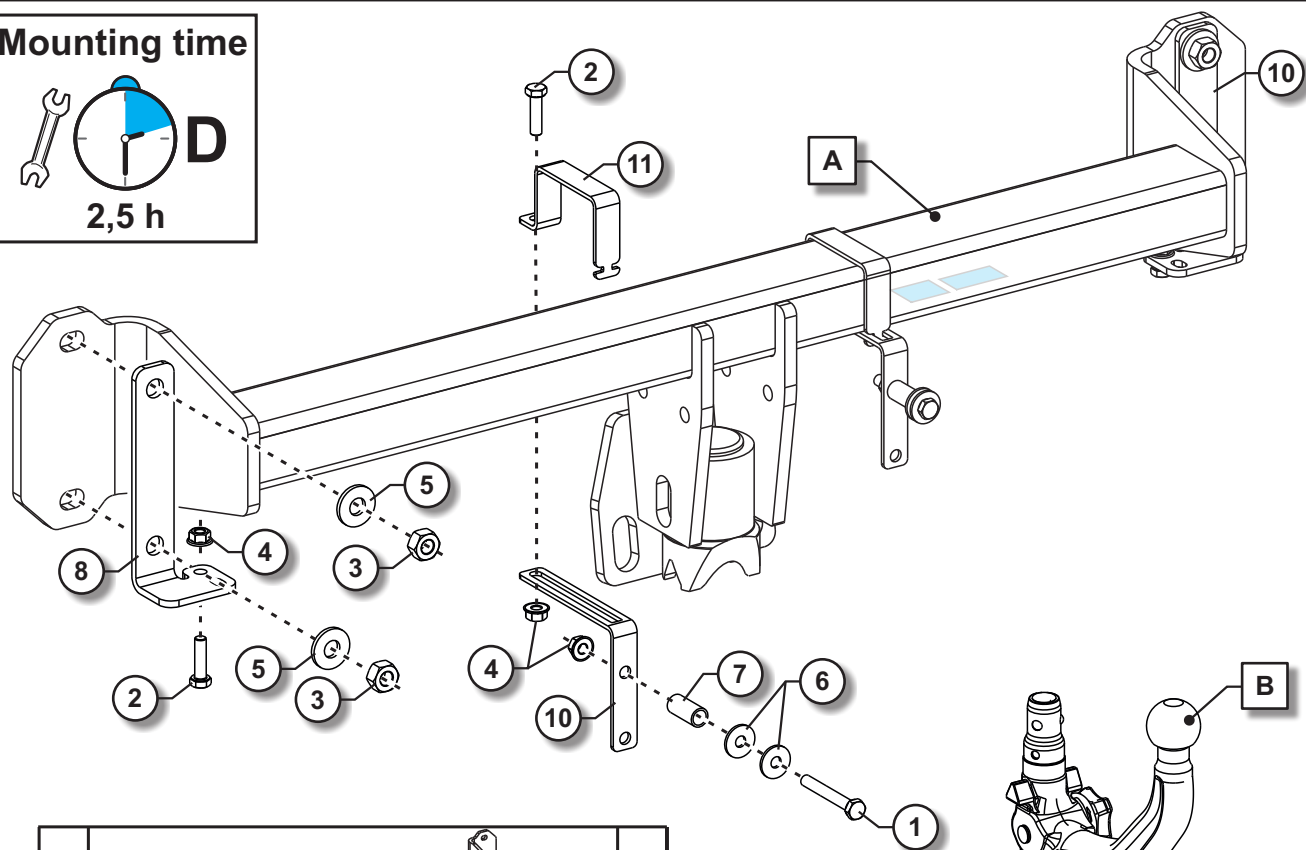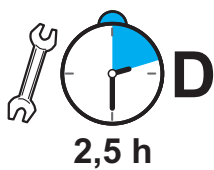

A		1x
B		1x

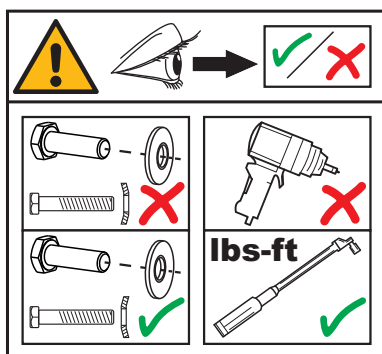


1		M8x60	8.8	2x	25 lbs-ft
2		M8x30	10.9	4x	25 lbs-ft
3		M12x1,5	10.9	4x	90 lbs-ft
4		M8	10.9	6x	25 lbs-ft
5		13x30x3,2		4x	
6		M8		4x	
7		14x1,5x30		2x	
8				1x	
9				1x	
10				2x	
11				2x	

Spare Parts








290019

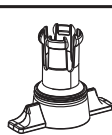


290039



290059

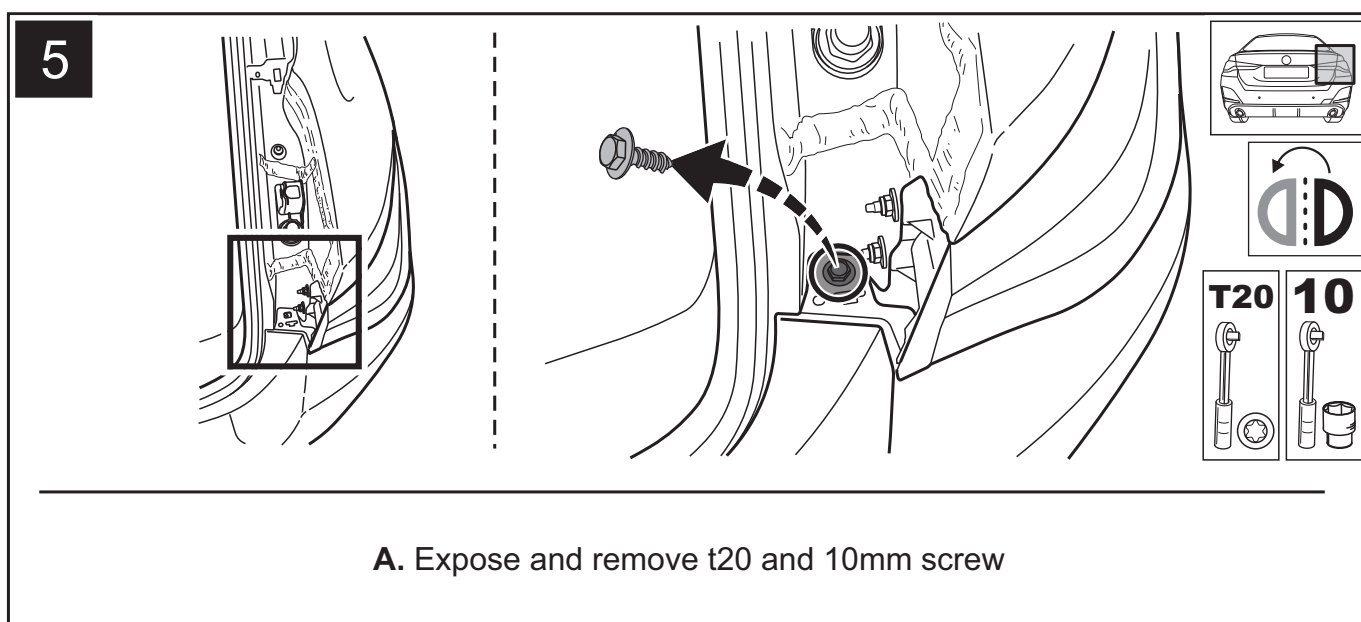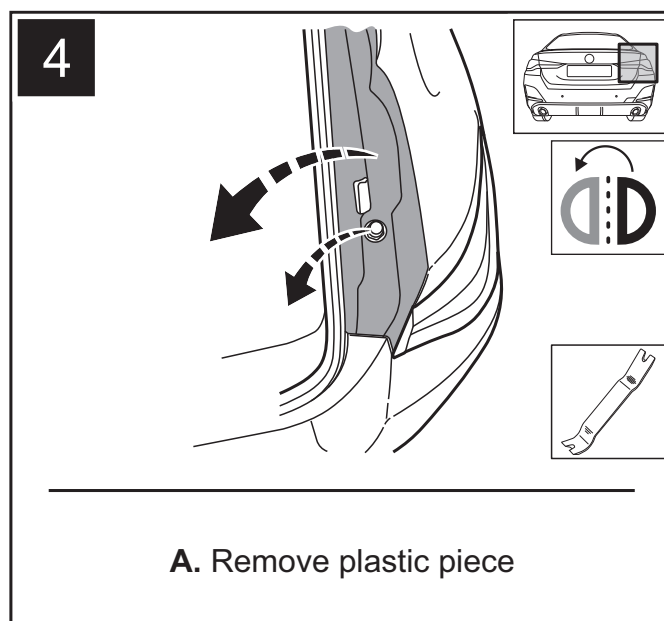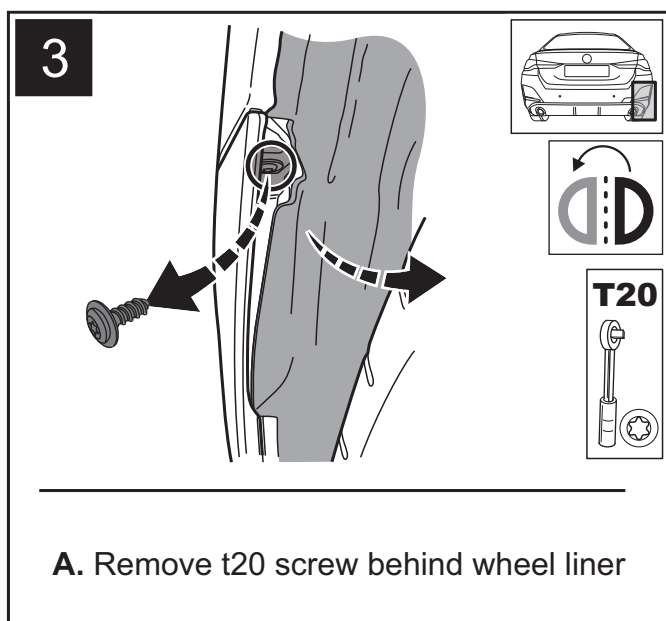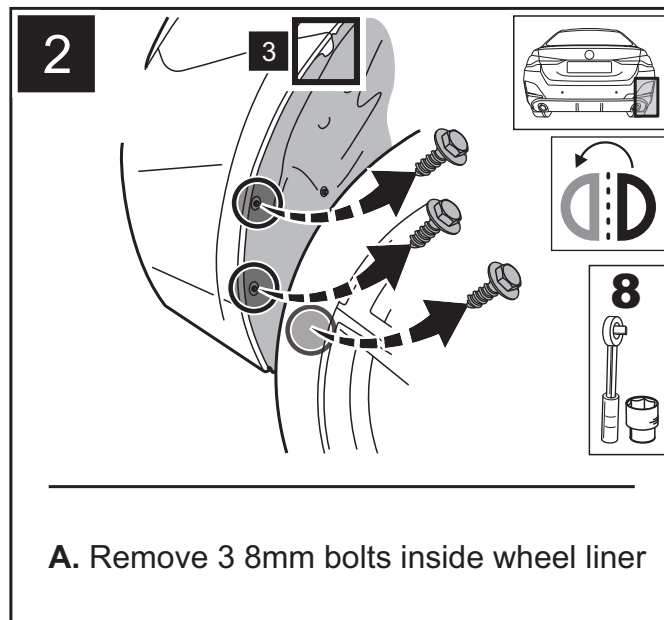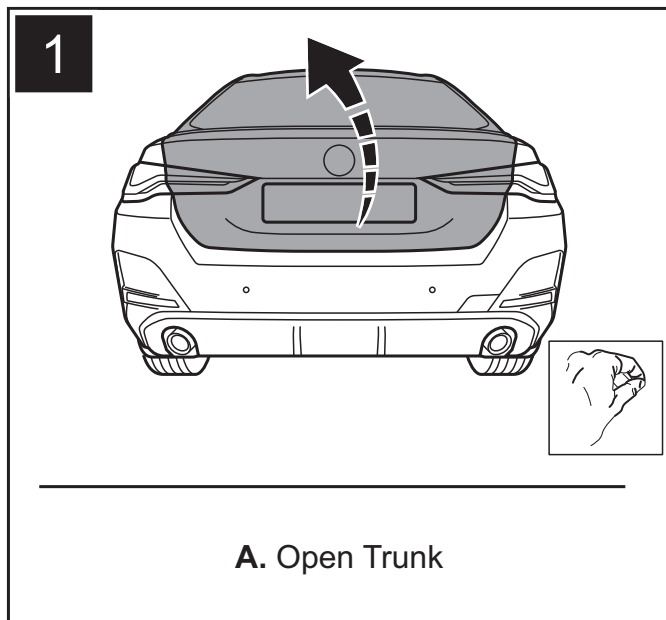


6


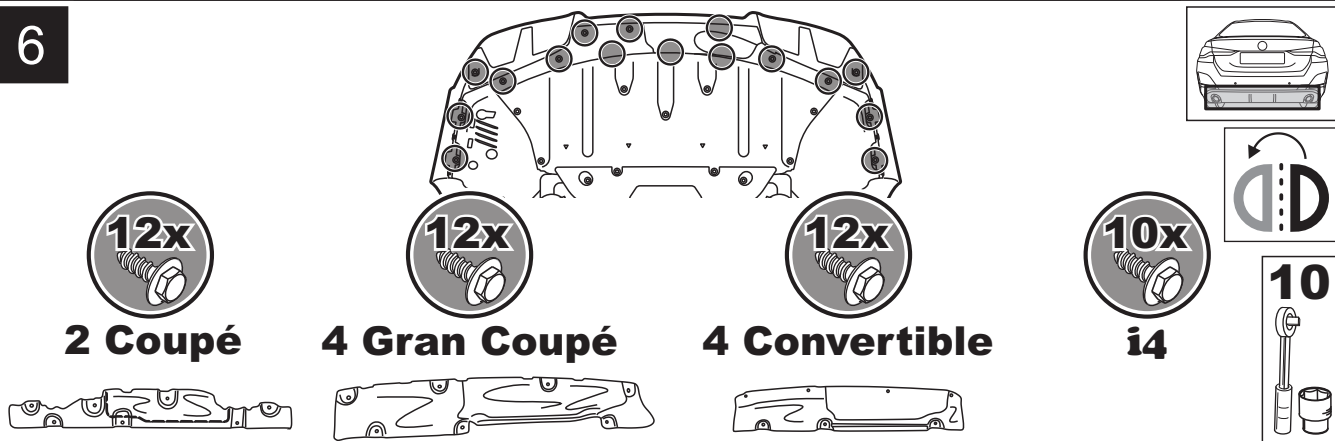


A. Remove underbody bolts

7

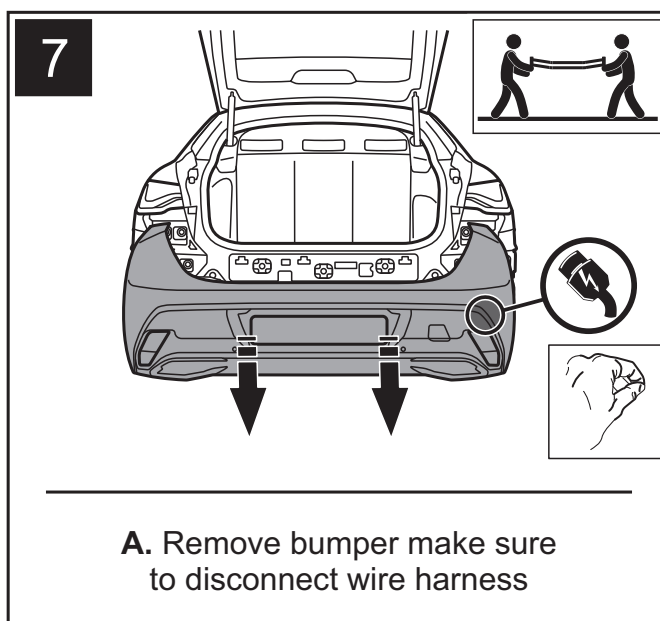


8

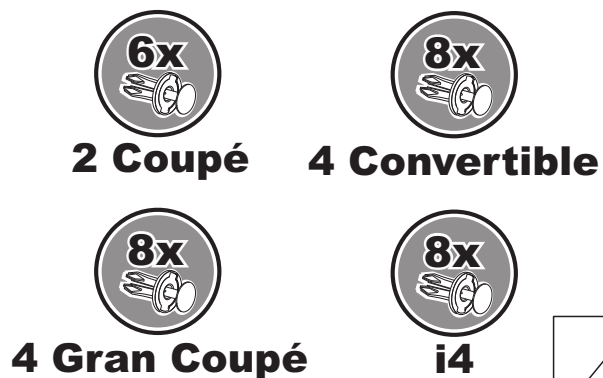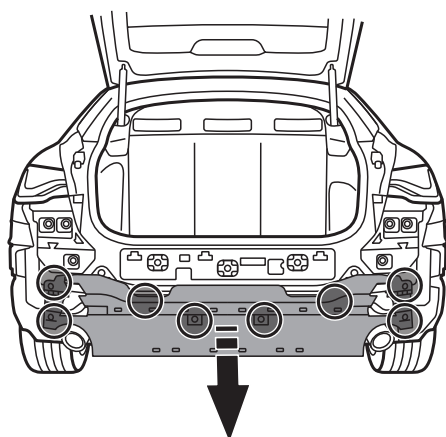


A. Remove plastic retainer clips and exhaust hanger bolts

9

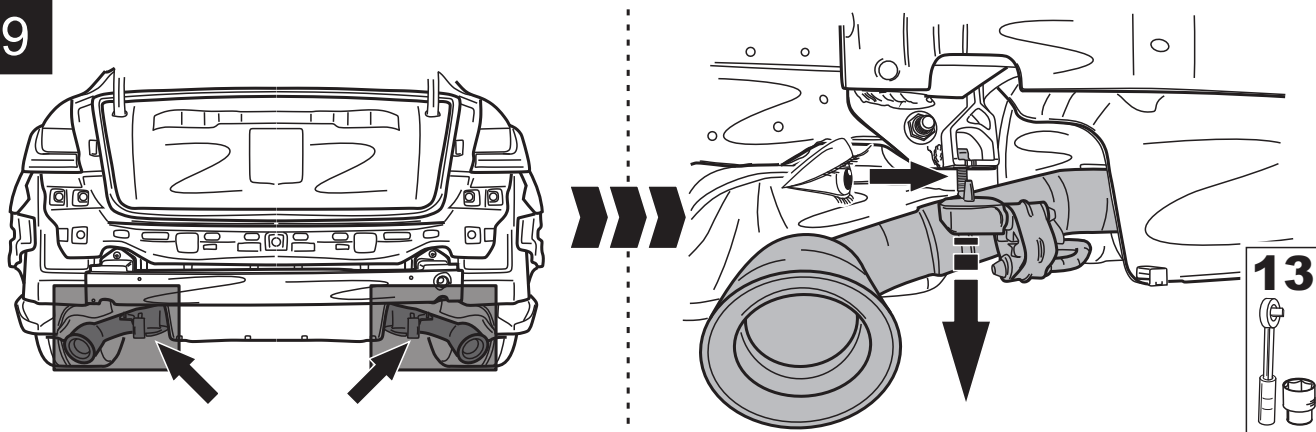

A. Make sure to support exhaust with a strap or something similar




10

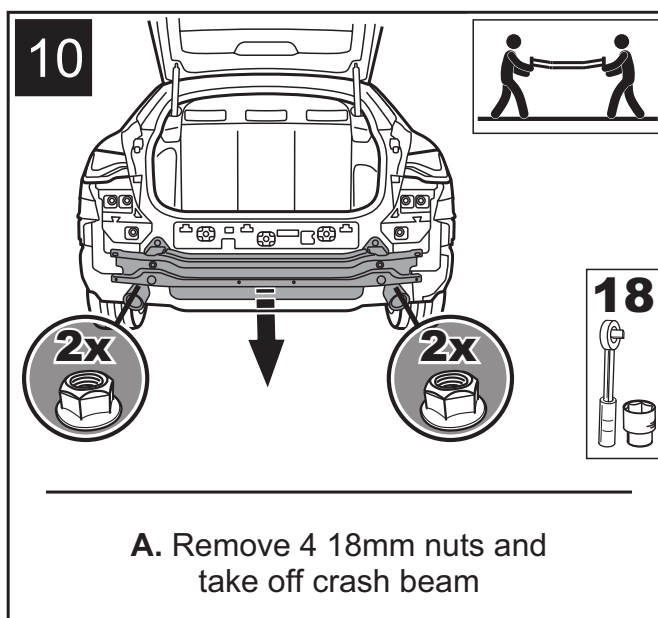




A. Remove 4 18mm nuts and take off crash beam

11





BMW 4 GRAN COUPÉ * = 2 1/2"
BMW i4
BMW 4 Convertible * = 3 1/2"

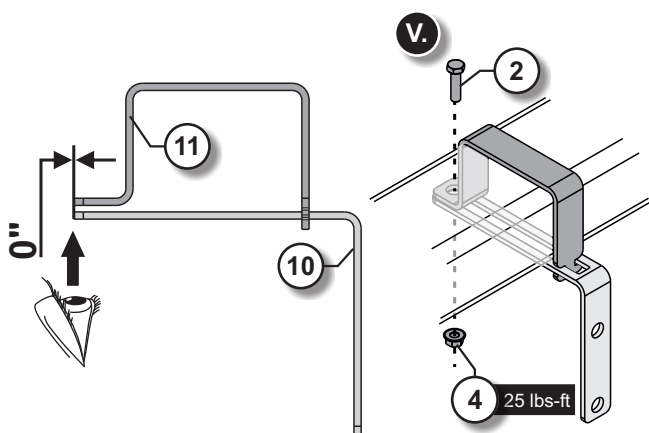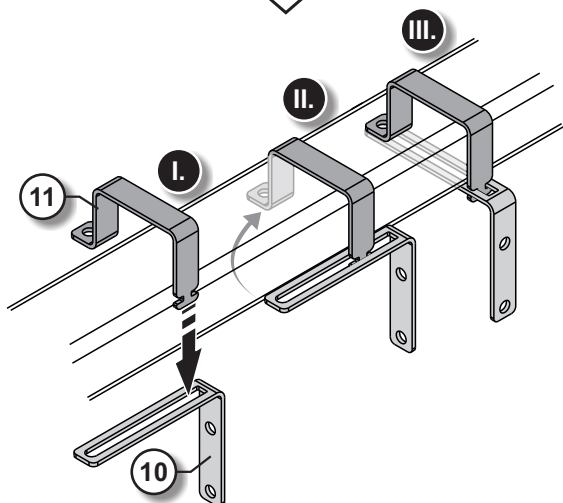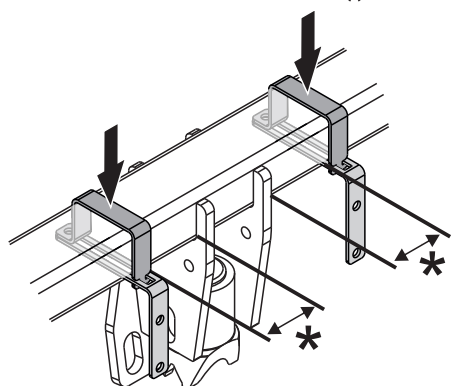


BMW 2 COUPÉ * = 3 1/2"

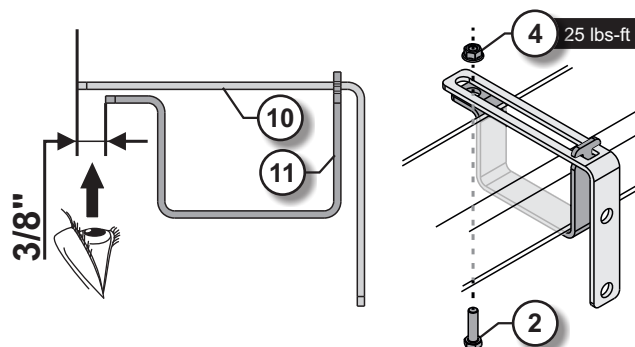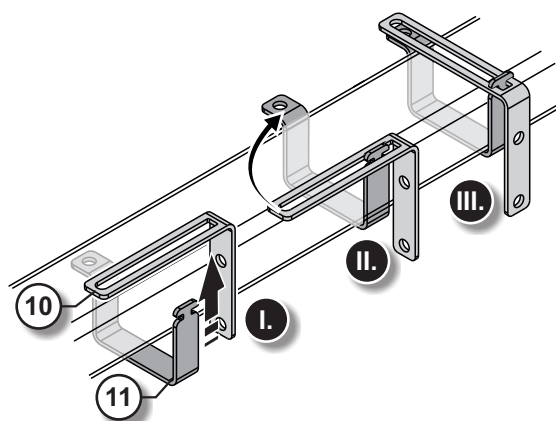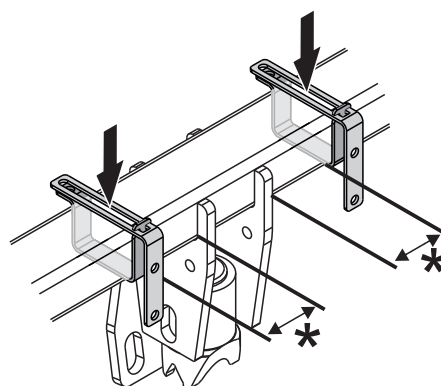

A. Install brackets based on model

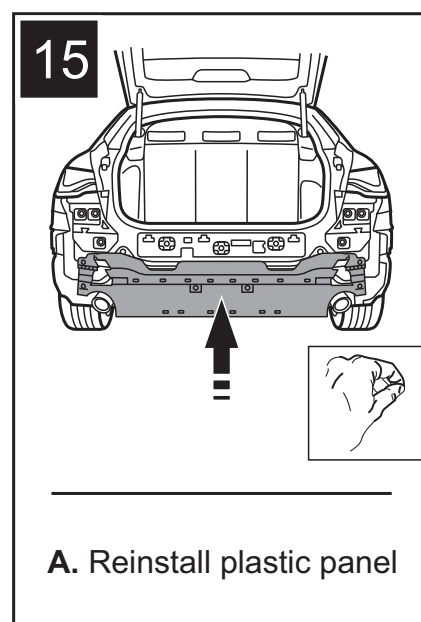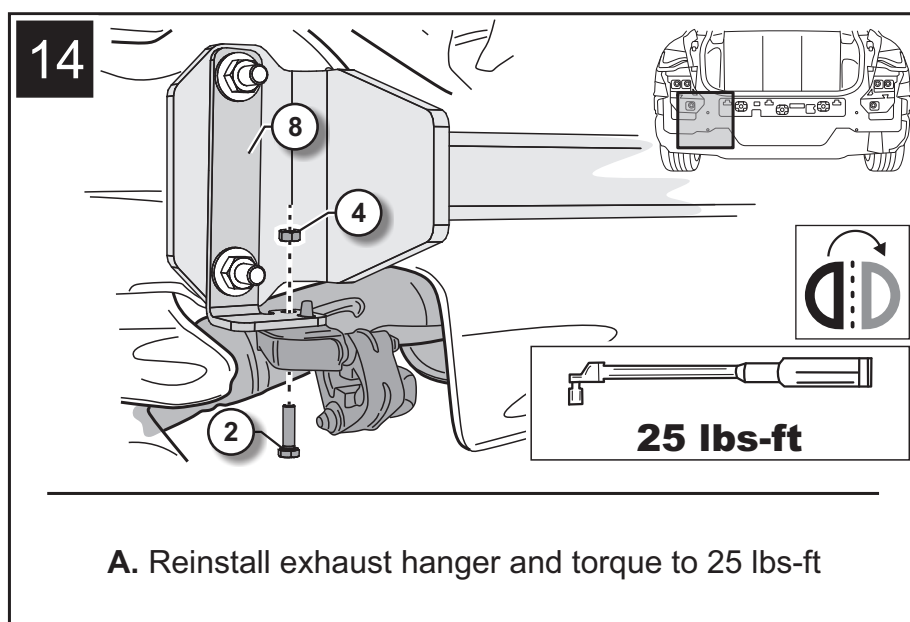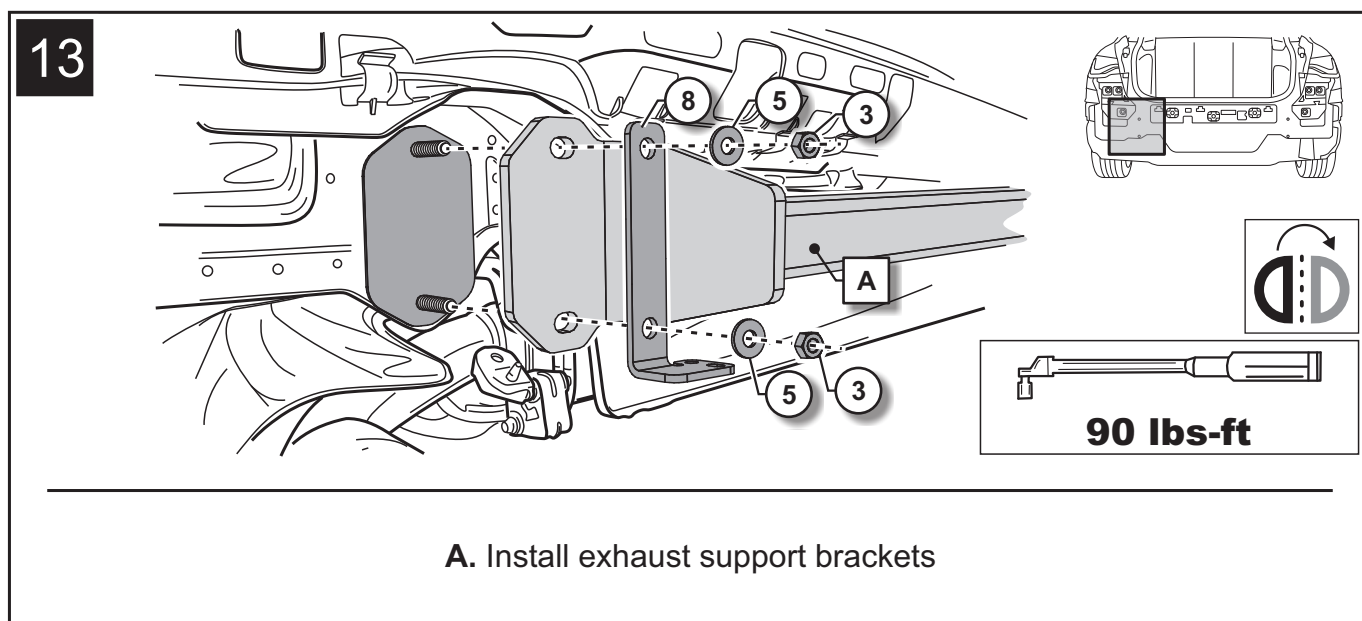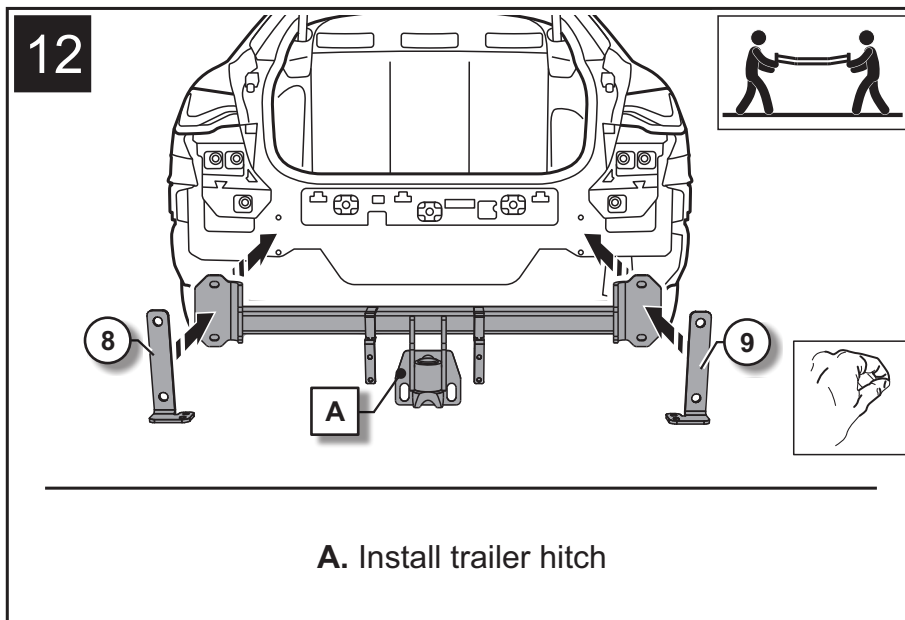

16

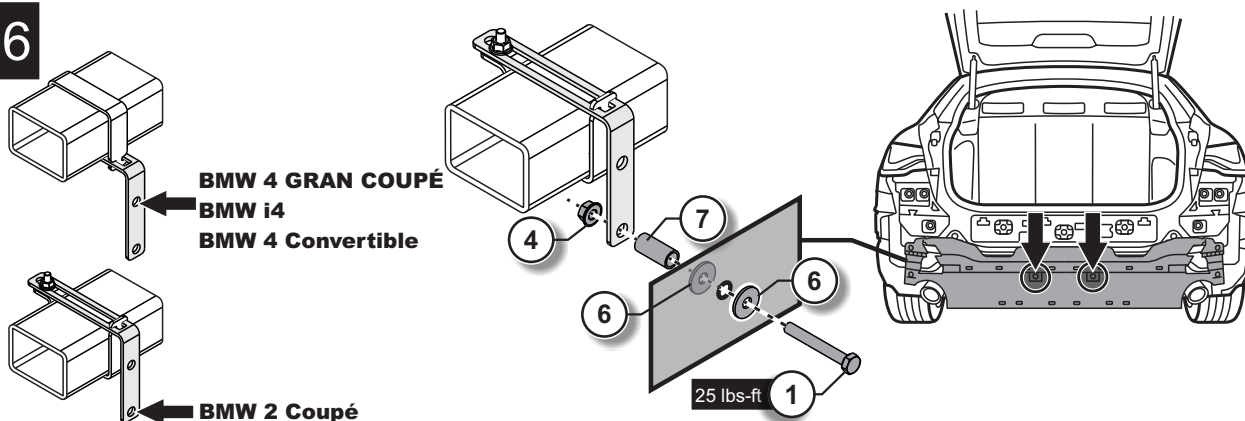


A. Assemble the parts as shown in the picture

17

2 Coupé


4 Gran Coupé

4 Convertible

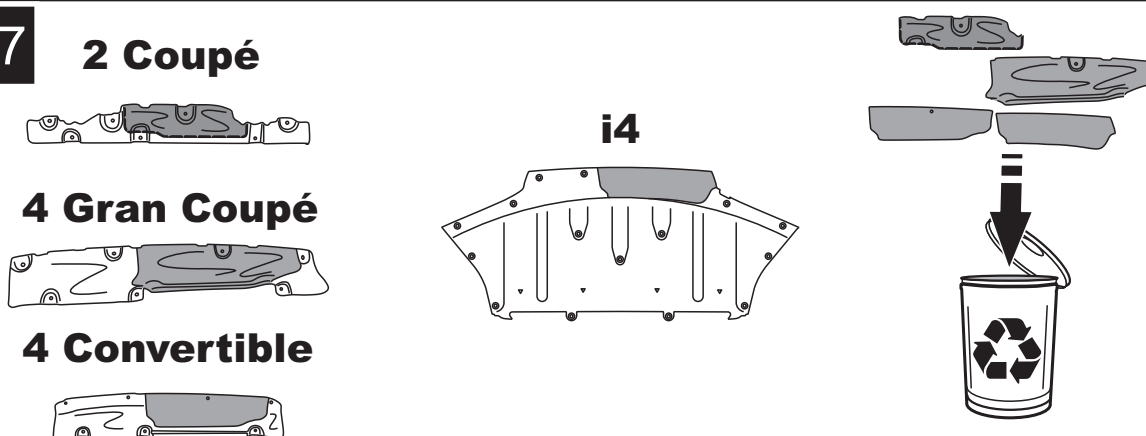


- A. If you don't have cutout in bumper already you will need to cut the plastic
B. Make cutout in bumper using tool of choice (Dremel, oscillating tool, etc.)

18

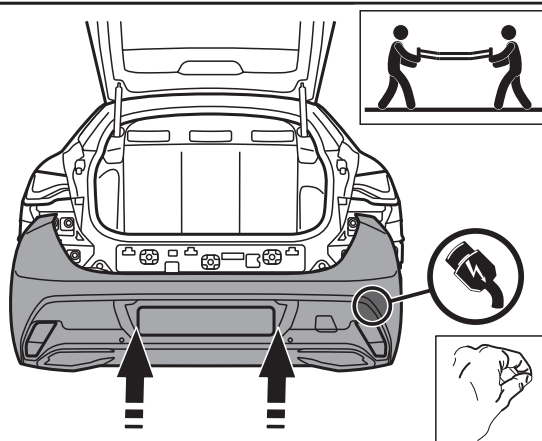


A. Reinstall bumper make sure to connect wire harness

19

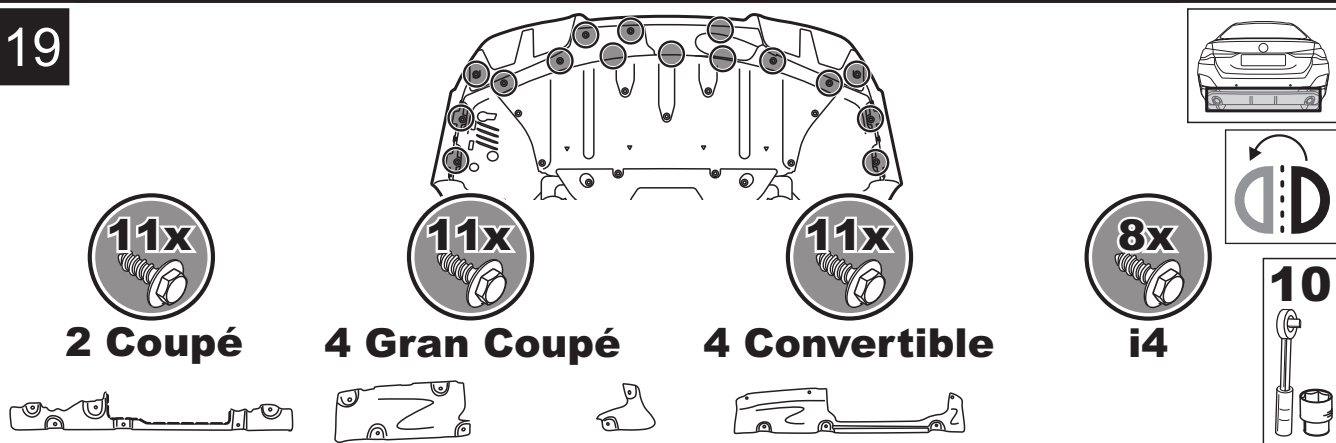


A. Reinstall underbody bolts

20

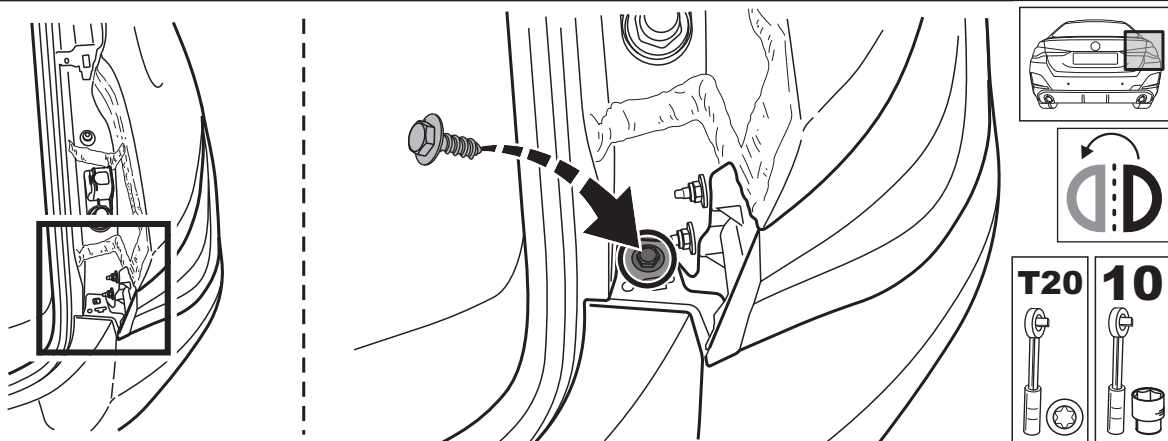


A. Reinstall t20 and 10mm screw

21


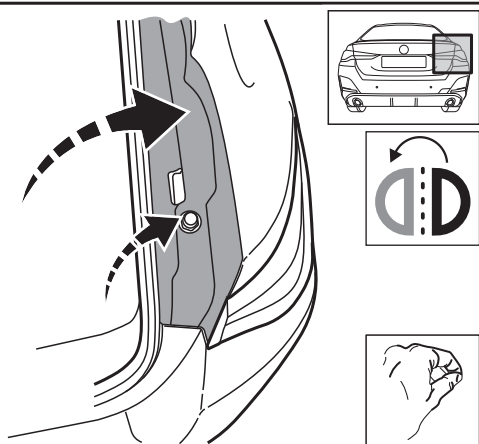


A. Reinstall plastic piece

22

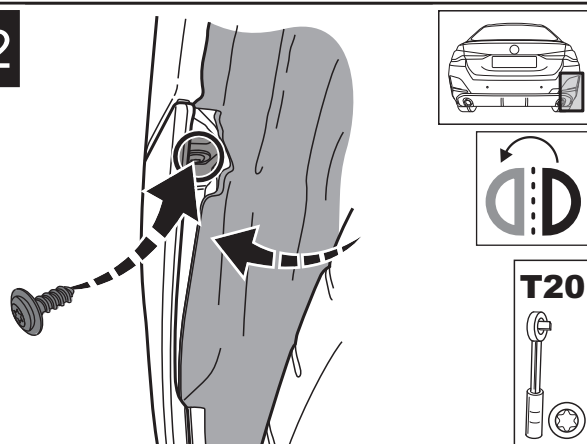

A. Reinstall t20 screw behind wheel liner

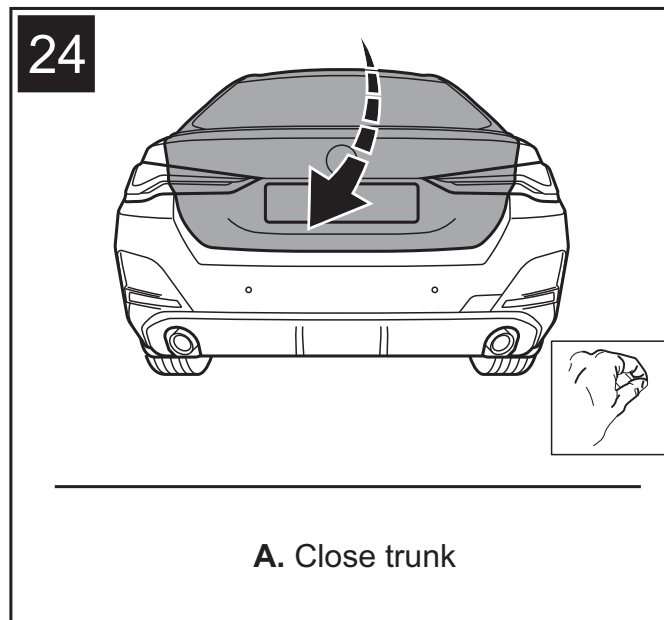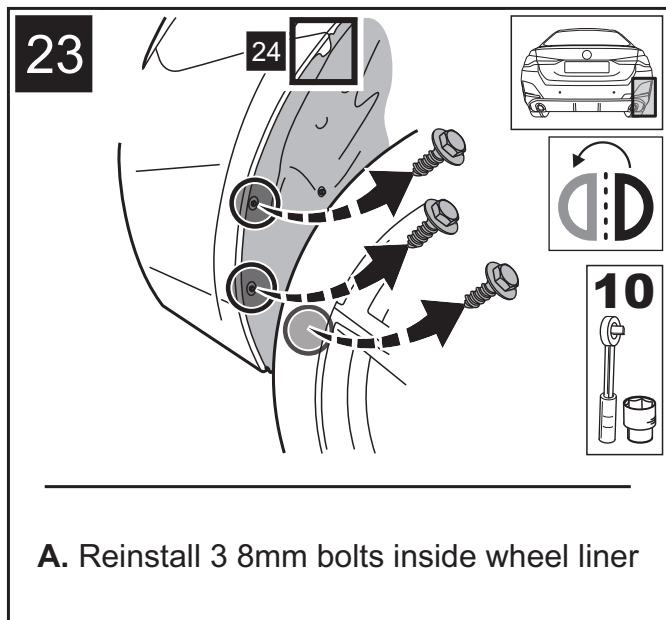

ORIS
ACPS

HELPLINE



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide

ORIS
ACPS