



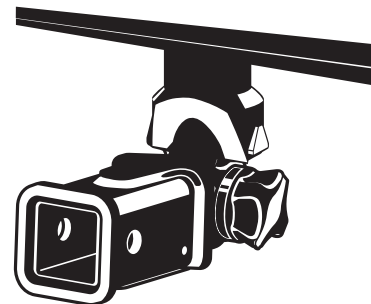


Part Number: 201004

Tesla Model 3

2017-

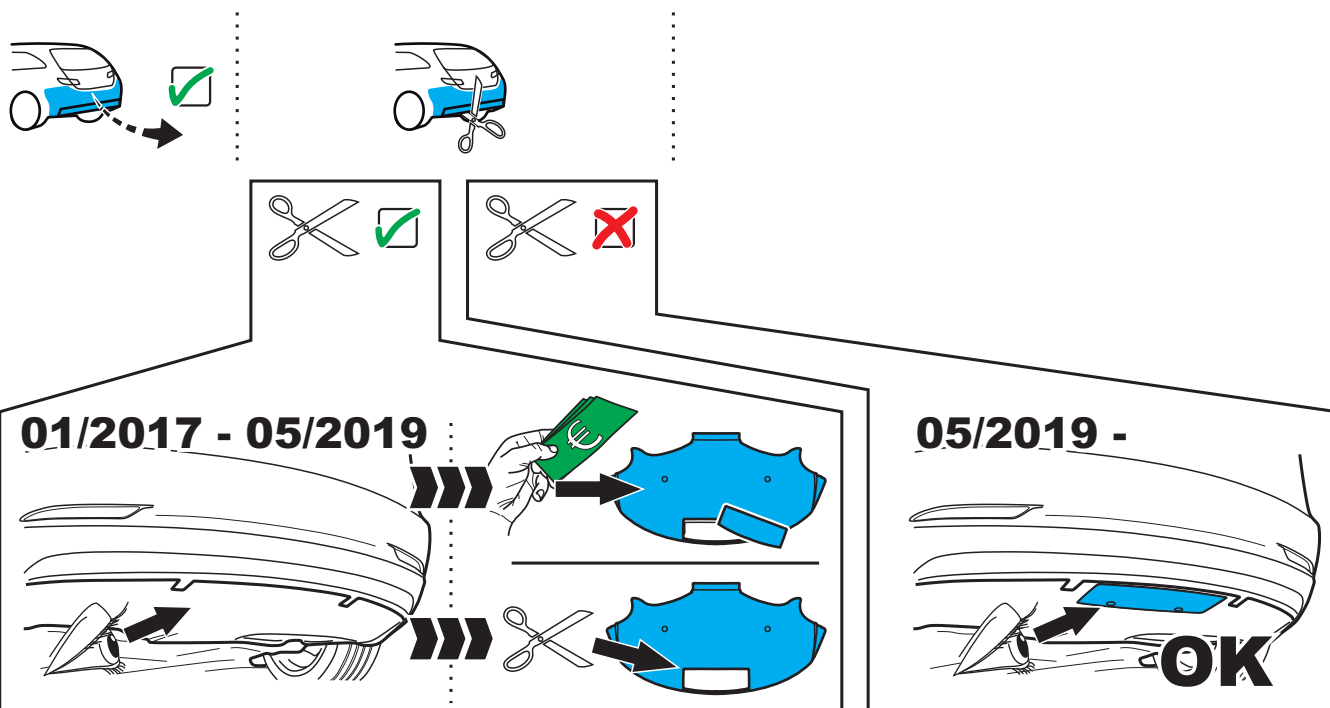

- ✓ Facelift 2019-
- ✓ Highland 2022-

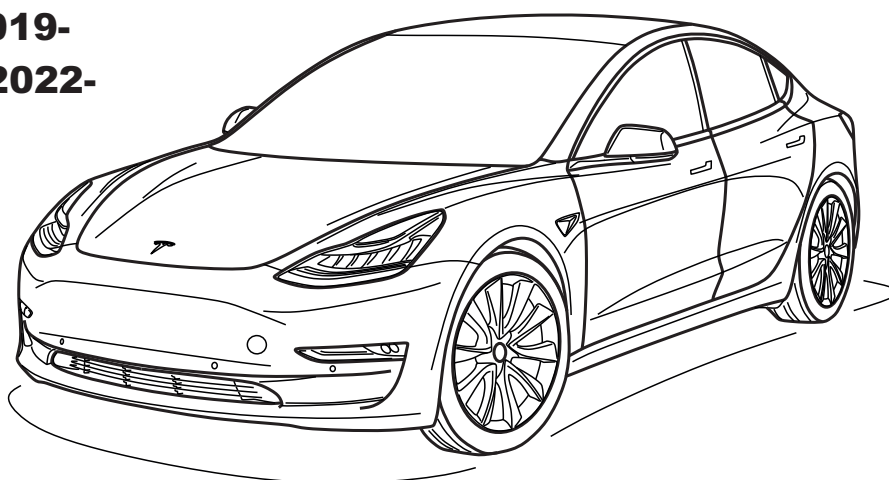



Check our webpage for the latest and a full-color copy of this fitting instruction.

www.oris-automotive.com/en/

Version: 02
Date: 27-09-2024



THESE INSTRUCTIONS MUST BE GIVEN TO THE END USER

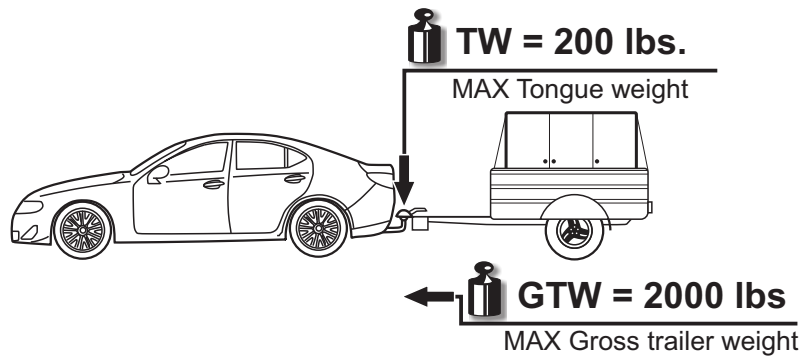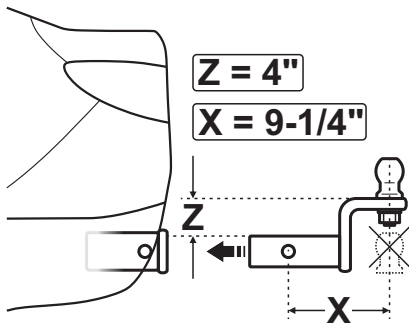

Never exceed the vehicle or the hitch manufacturer's recommended towing capacity and tongue weight.



IMPORTANT SAFETY NOTICE FOR HITCH INSTALLERS AND CUSTOMERS

Read all installation, operating and safety instructions along with all labels before installing or using this product. Failure to comply with the safety information could result in serious injury or death.



www.oris-automotive.com/en/safety/



WARNING: This product can expose you to chemicals including carbon black, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov



WARNING: Do not perform any installation or towing procedures without fully understanding the correct tools and actions for all steps. Call for support if needed.



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide/

Legend / Légende / Leyenda



US Attention
F Attention
E Atención




US Incorrect
F Incorrect
E Incorrecto



US Correct
F Correct
E Correcto




US Inspect
F Examiner
E Revise



US In both sides
F Tous les deux côtés
E En ambos lados



US Manually
F À la main
E A mano



US Only 2 persons may carry out
F Toujours s'y mettre de deux
E Operación que requiere dos personas



US Remove
F Rebuter
E Tratamiento de residuos



US Location/Position
Arrow
F Flèche de Position
E Flecha de posición



US Movement Arrow
F Flèche de mouvement
E Flecha de movimiento




US Protect it against corrosion
F Protéger contre la corrosion
E Proteger contra la corrosión




US Electrical connection
F Connexion électrique
E Conexión eléctrica

Tools Required / Outils requis / Herramientas requeridas

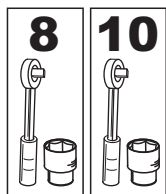

RATCHET
WITH
SOCKET




TORX



CUTTING
TOOL



TORQUE WRENCH
WITH SOCKET 17



PLASTIC
PRY

Safety / Sécurité / Seguridad

Should be worn at all times
while installing this product.





Il doit être porté en permanence
lors de l'installation de ce produit.

Debe llevarse en todo momento
mientras se instala este producto.



Assembly / Assemblage / Montage

Mounting time

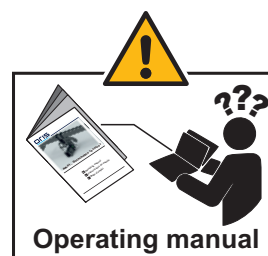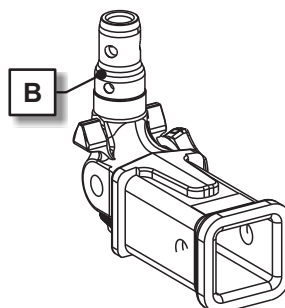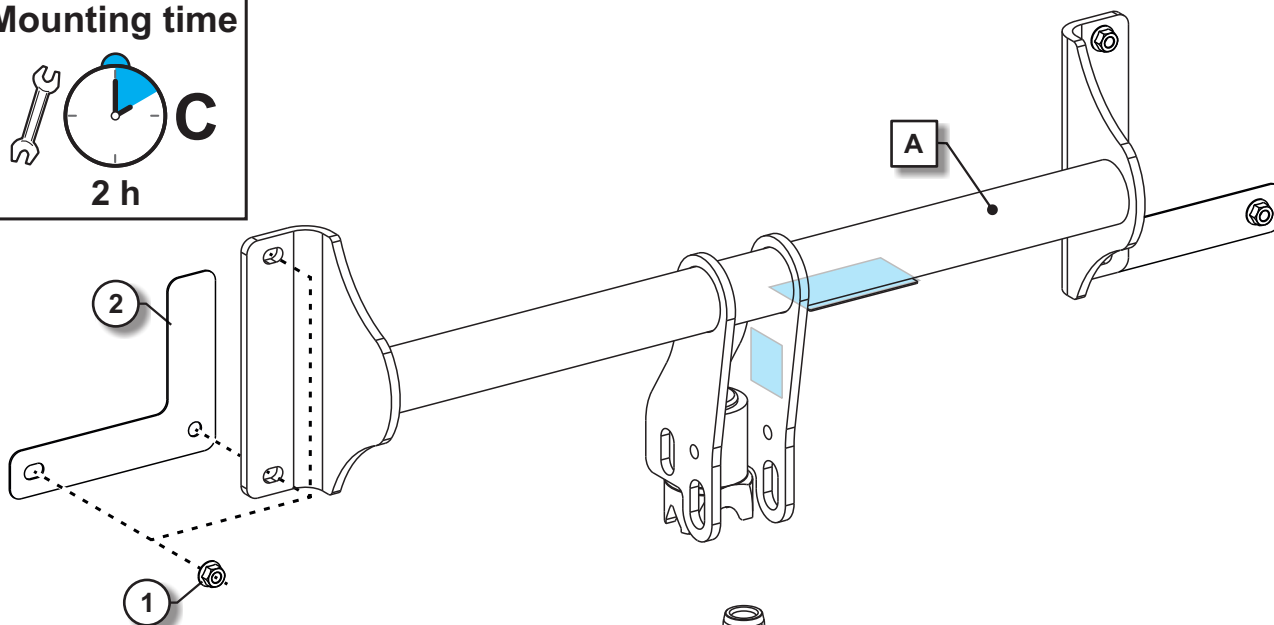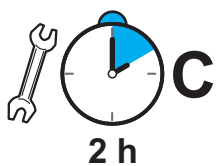


A		1x
B		1x

1		M10	10	6x	50 lbs-ft
2				2x	
3				1x	

Spare Parts




290019














290039













290139

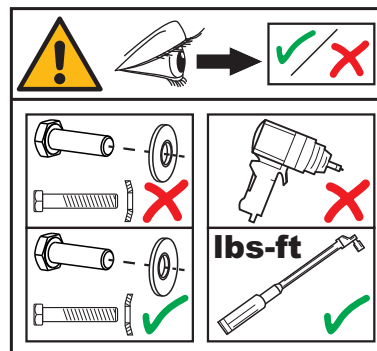

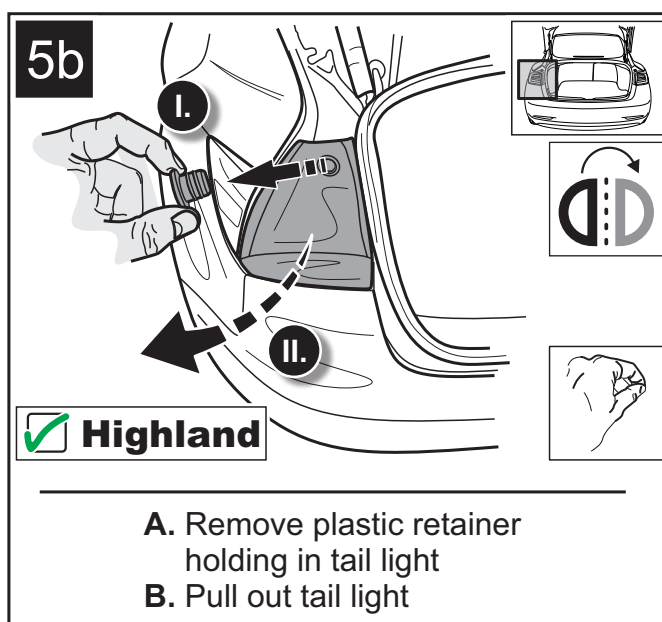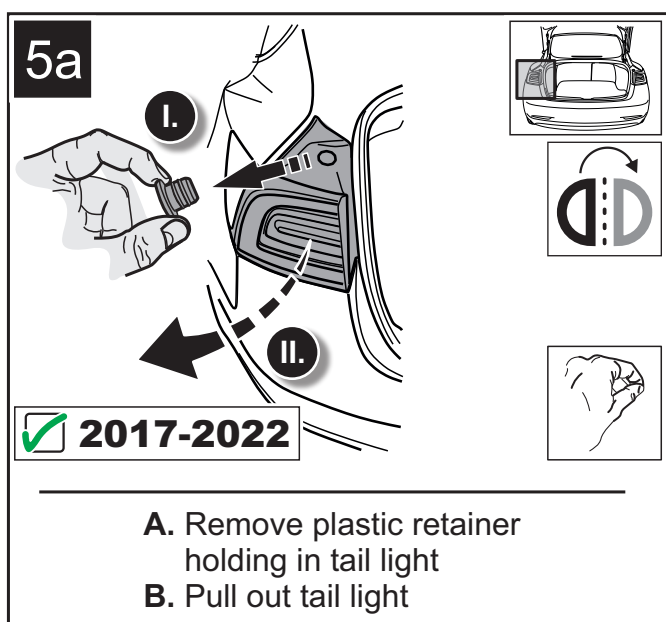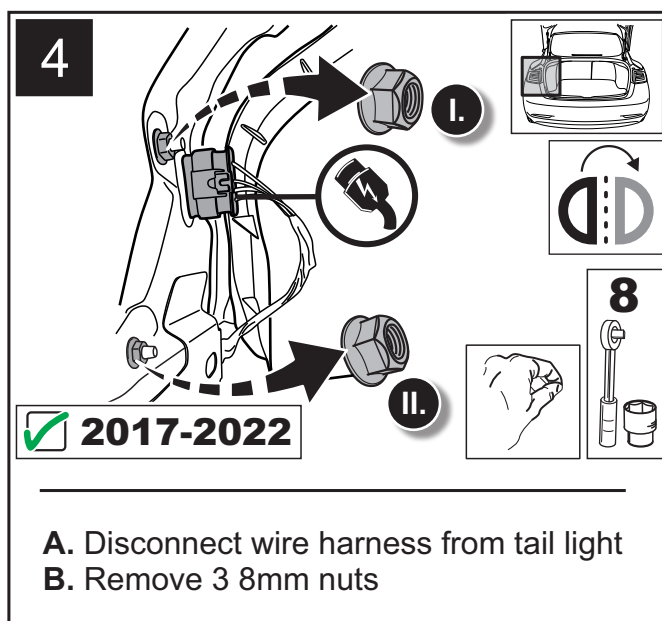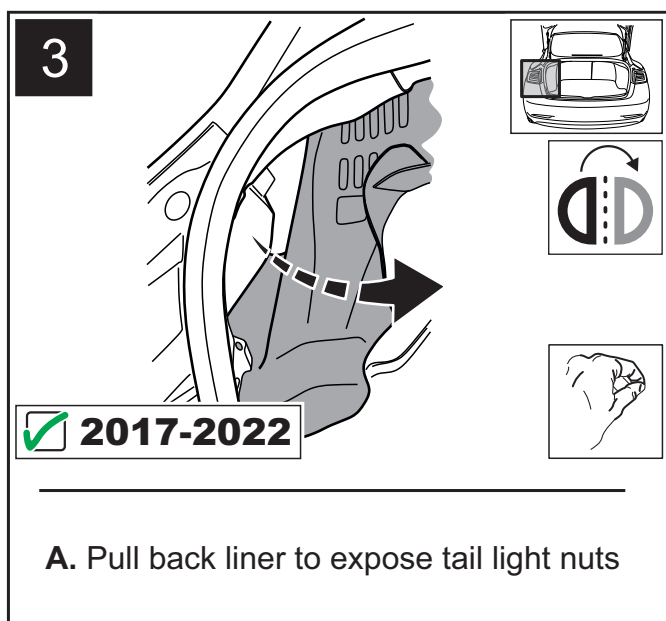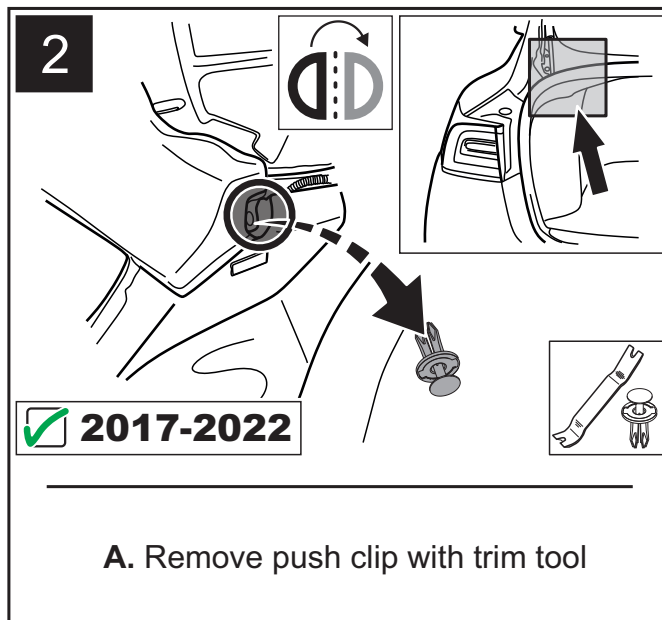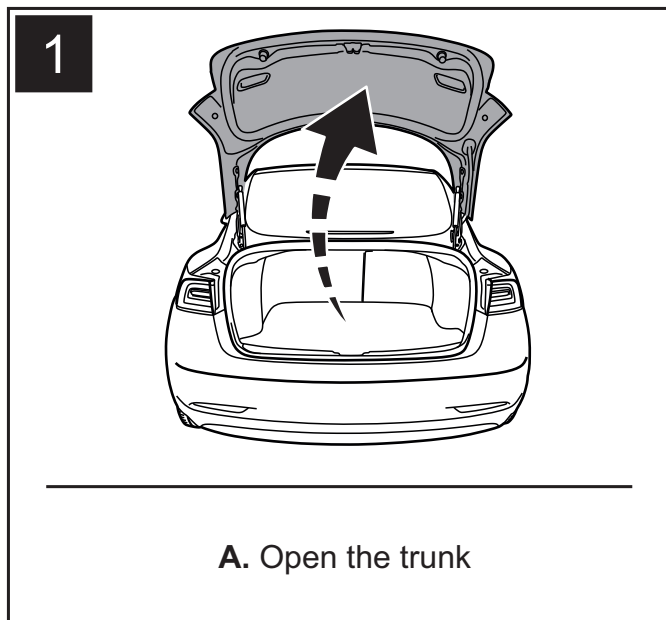

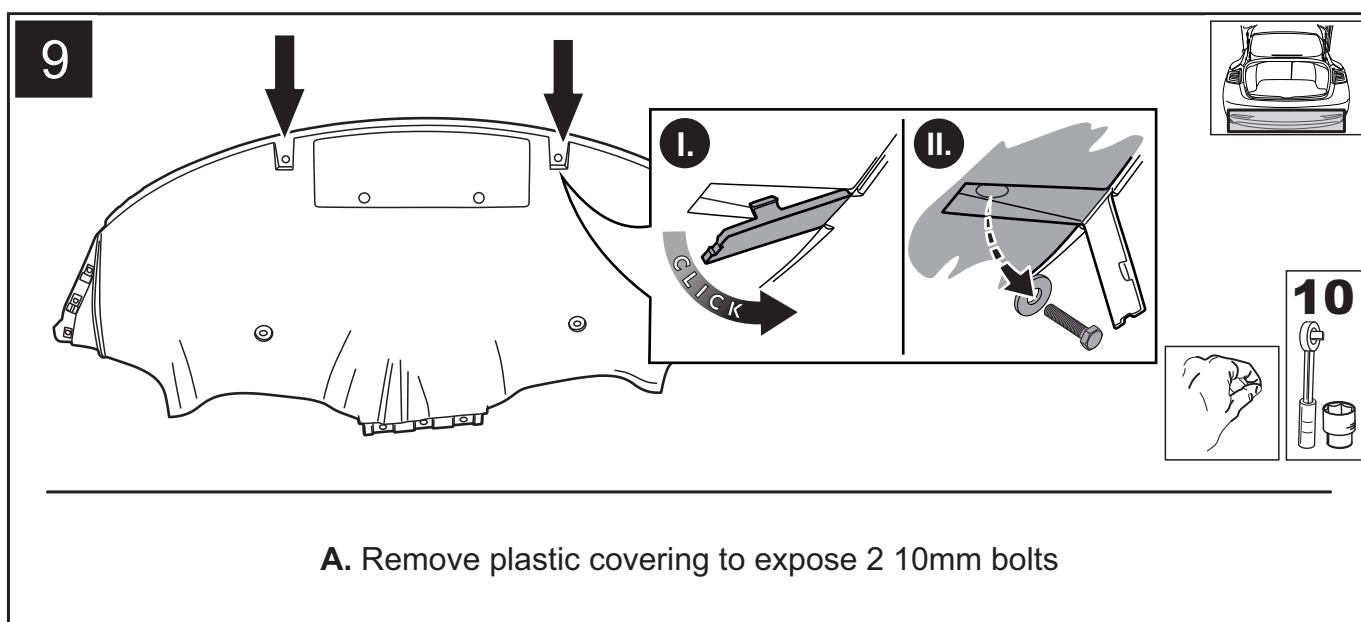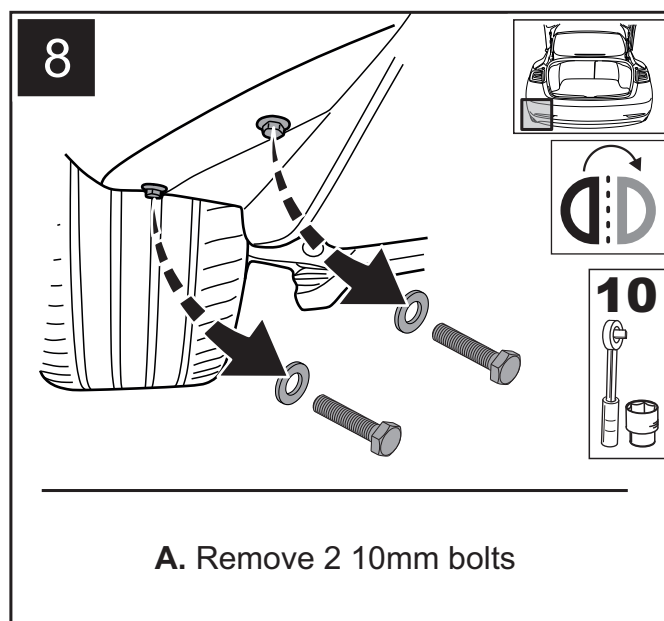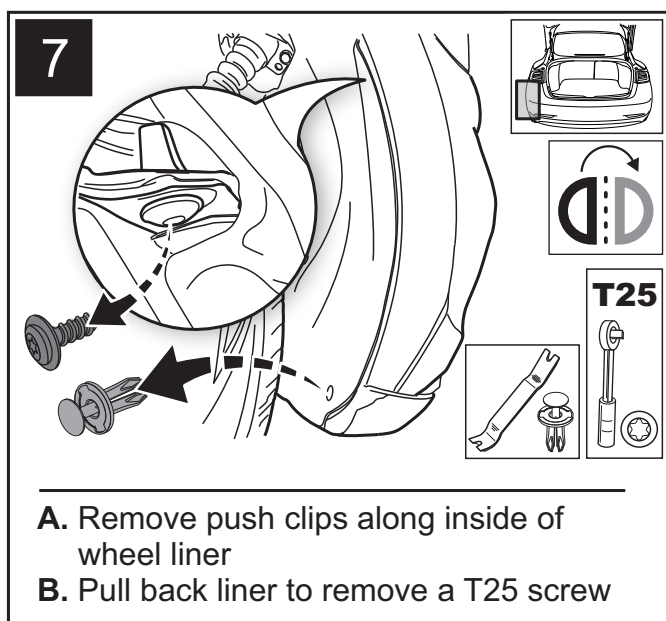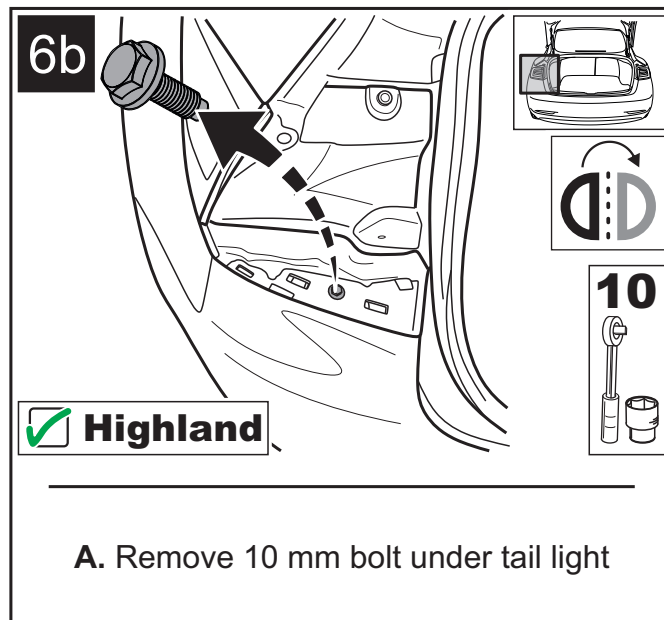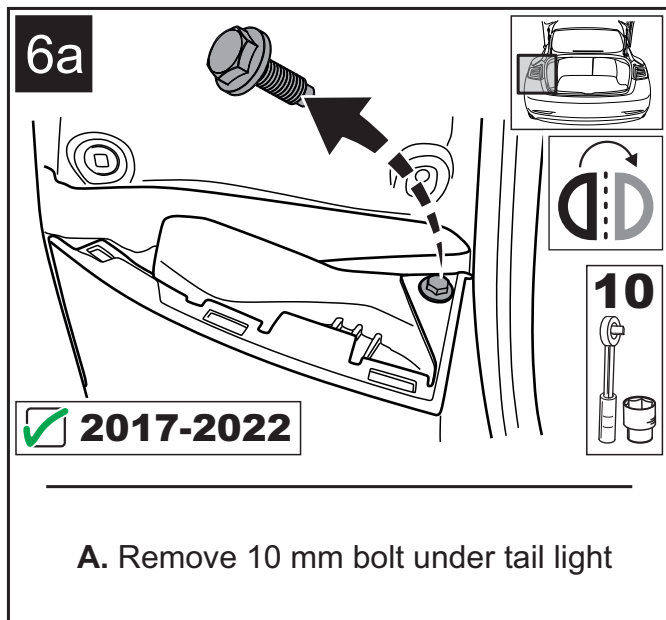

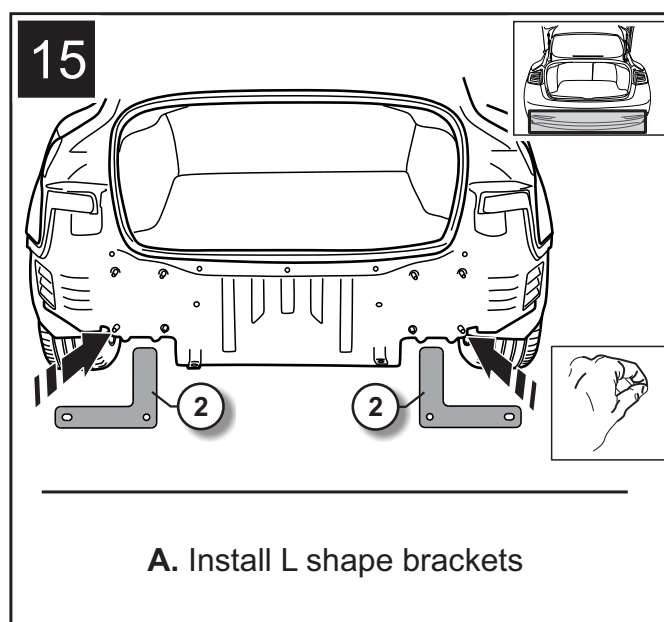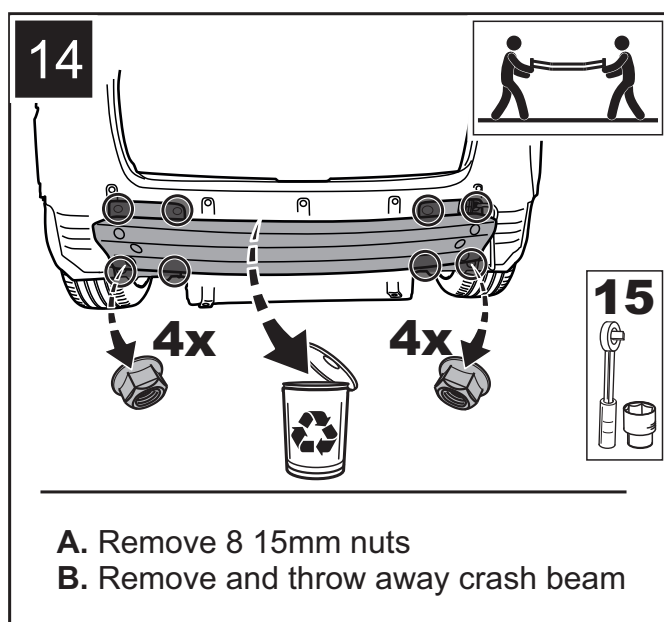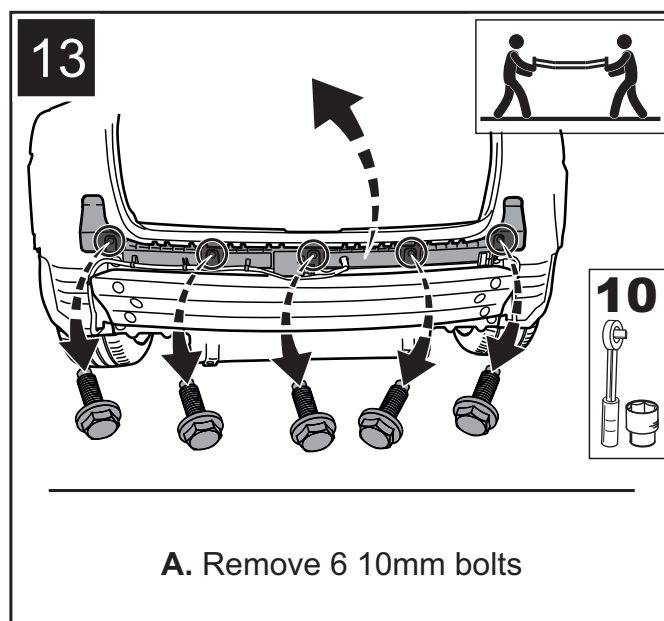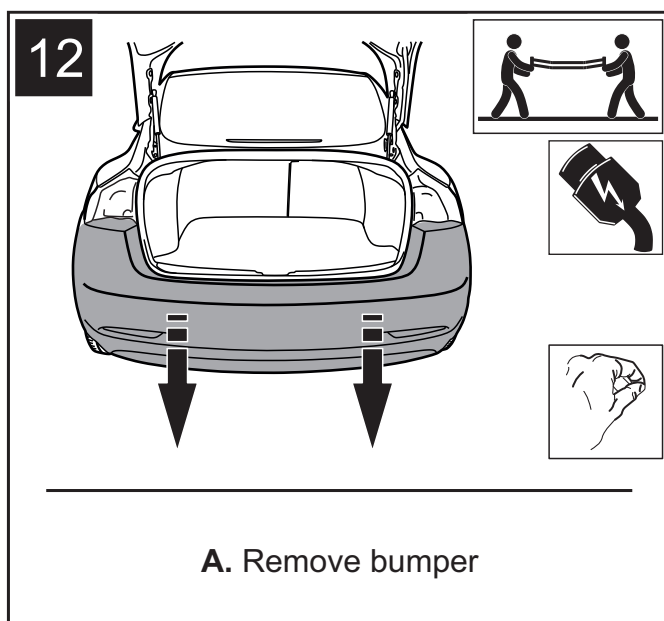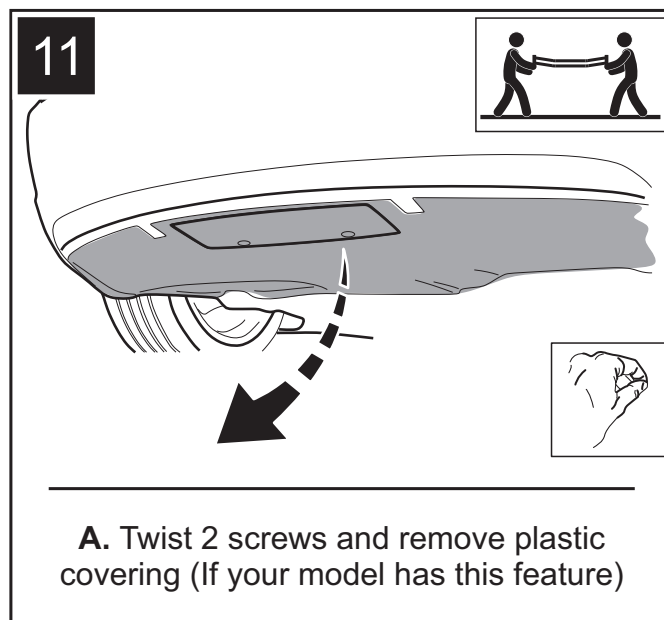
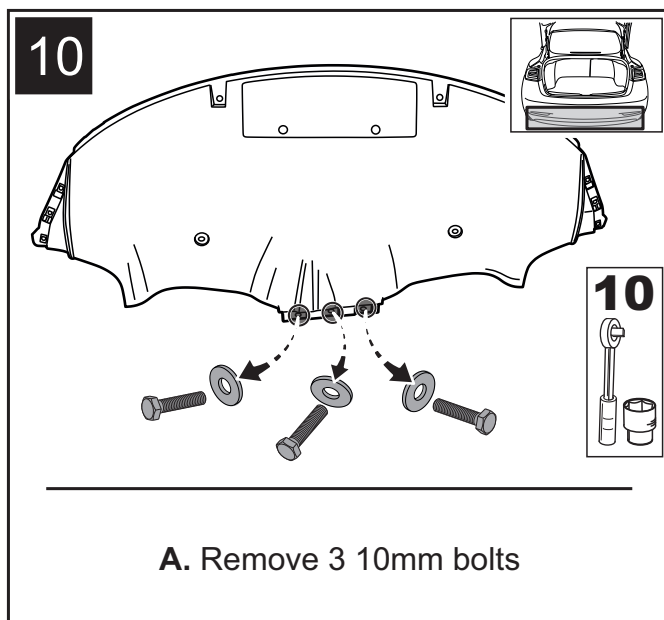


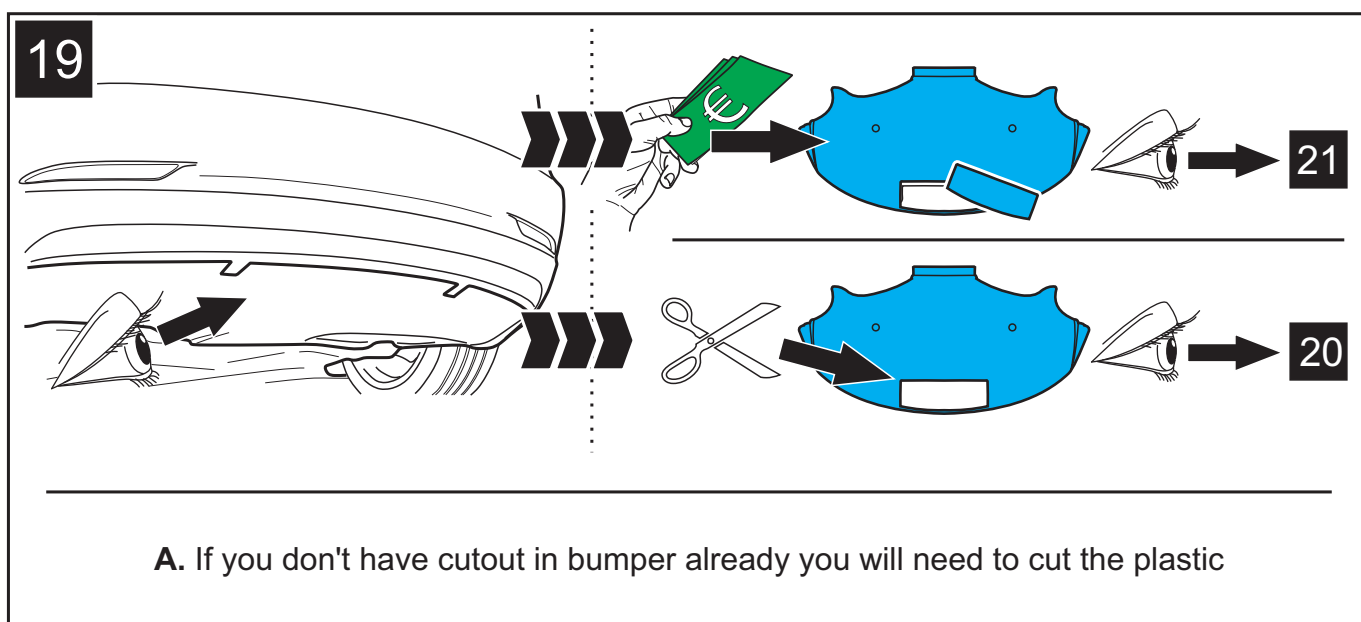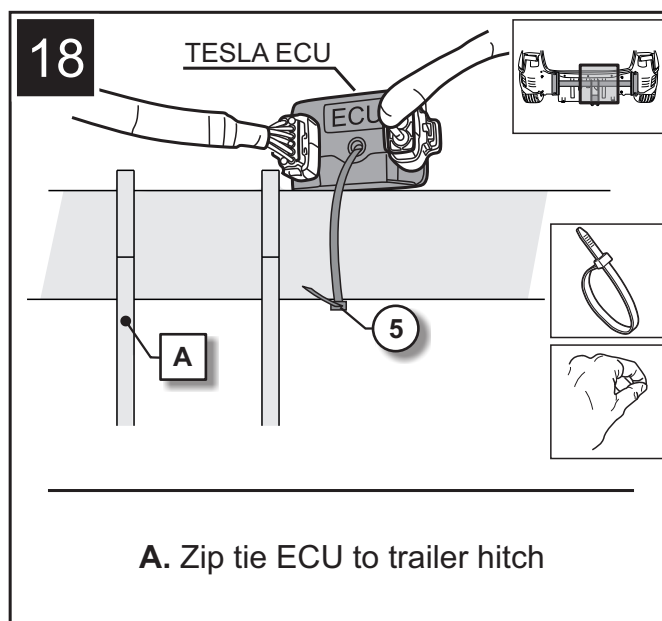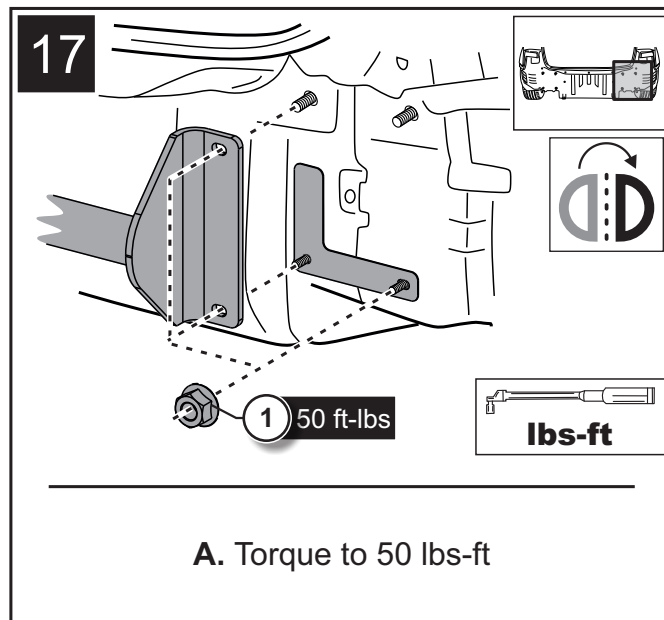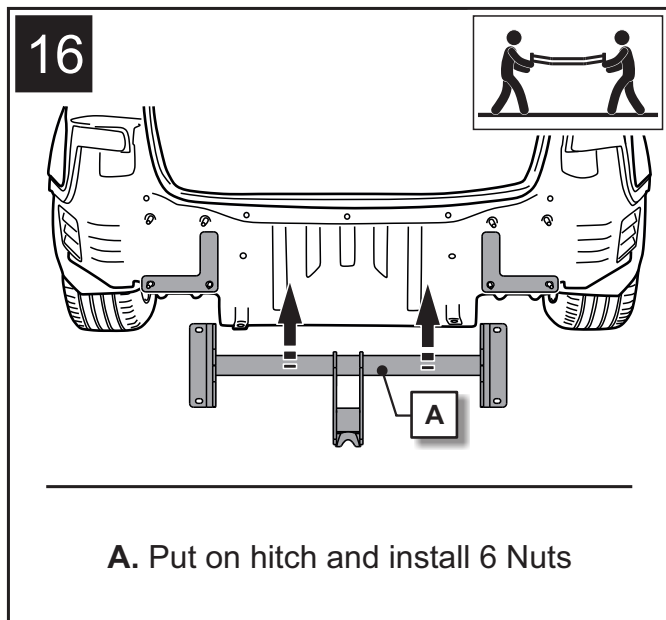

20



When making the cutout, please make sure to have enough clearance to operate hitch functions properly. This cutout is a guide, as some vehicle models will have slightly different build options.

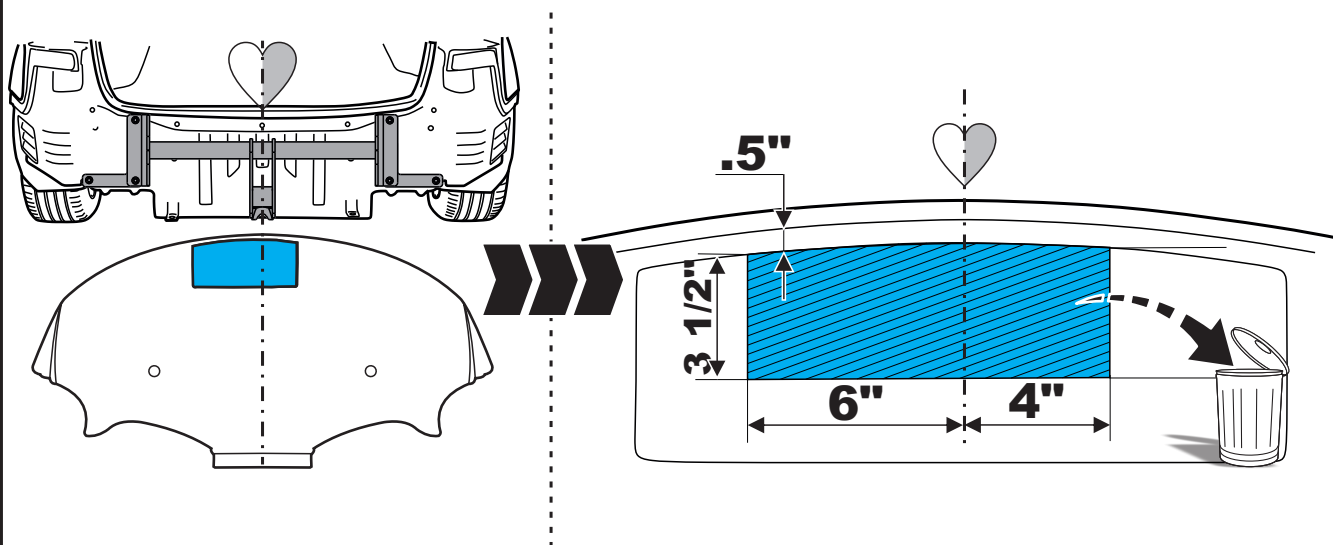


✓ **01/2017 - 05/2019**

✗ **05/2019-**


A. Make cutout in bumper using tool of choice (Dremel, oscillating tool, etc.) and diagram provided

21





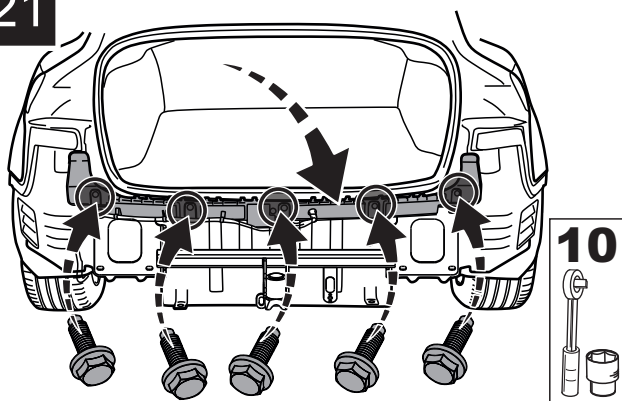








A. Install 6 10mm bolts



22

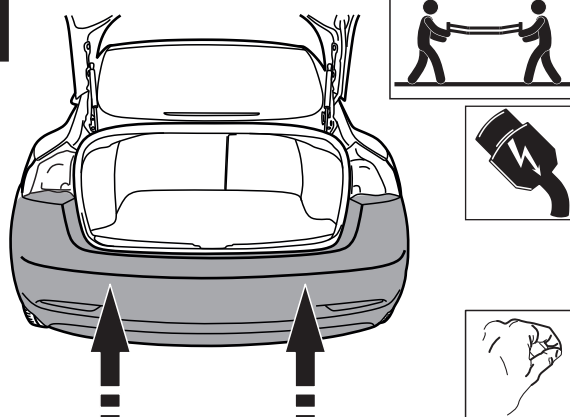

A. Reattach bumper

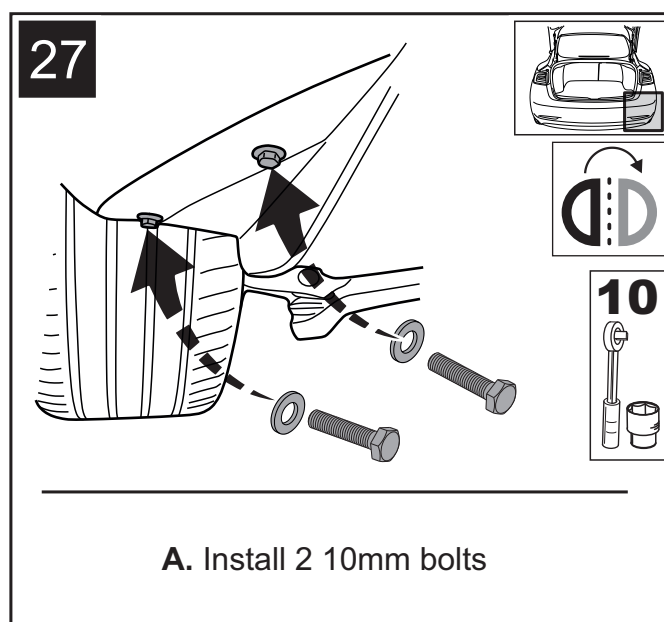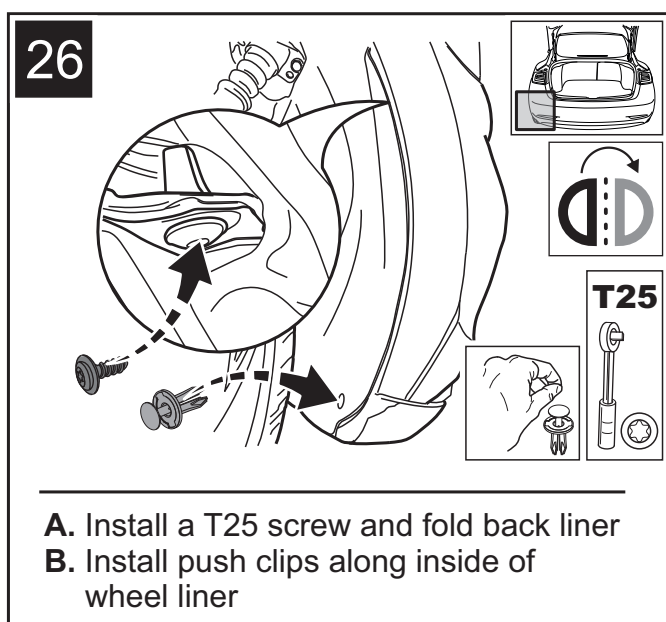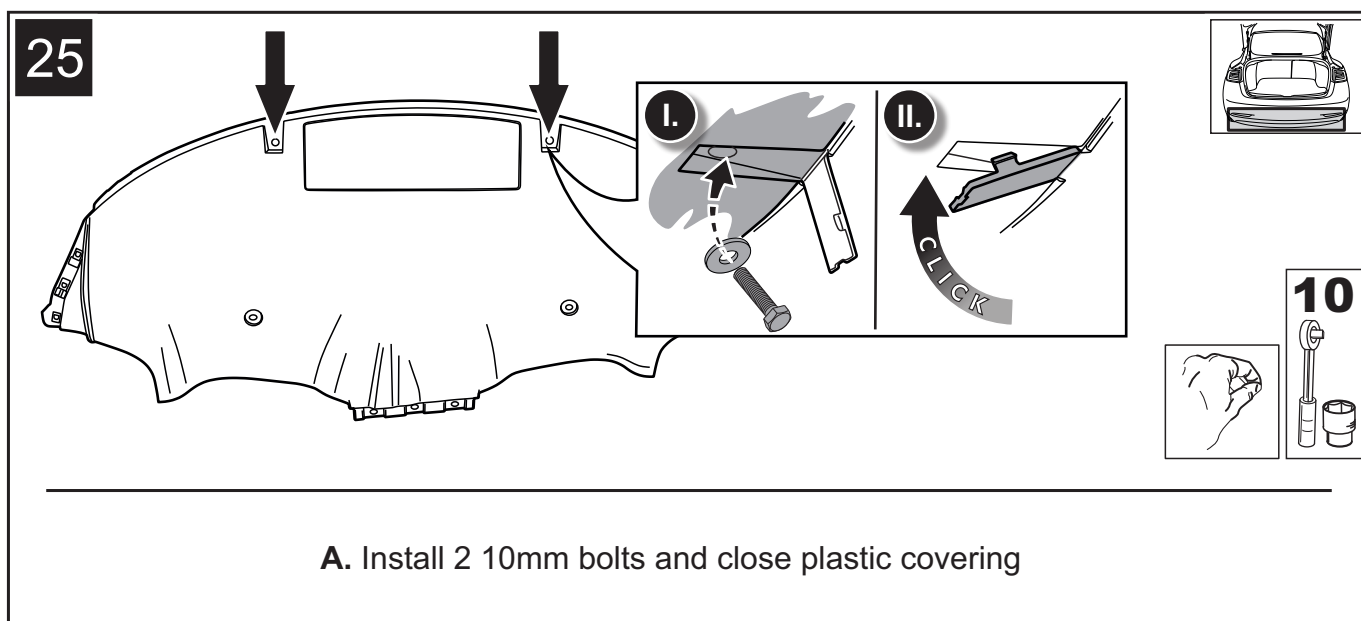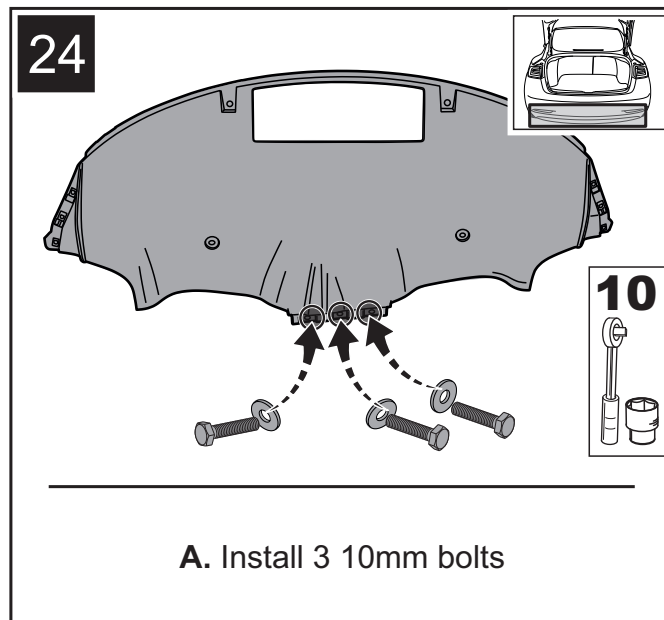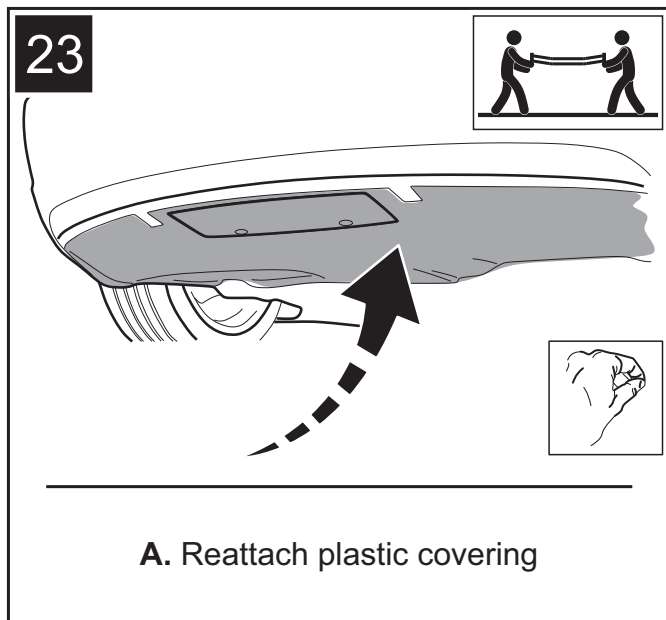

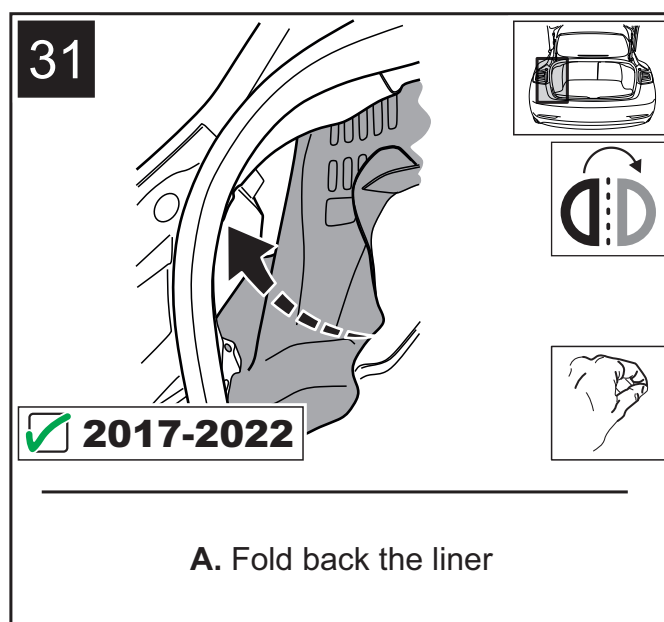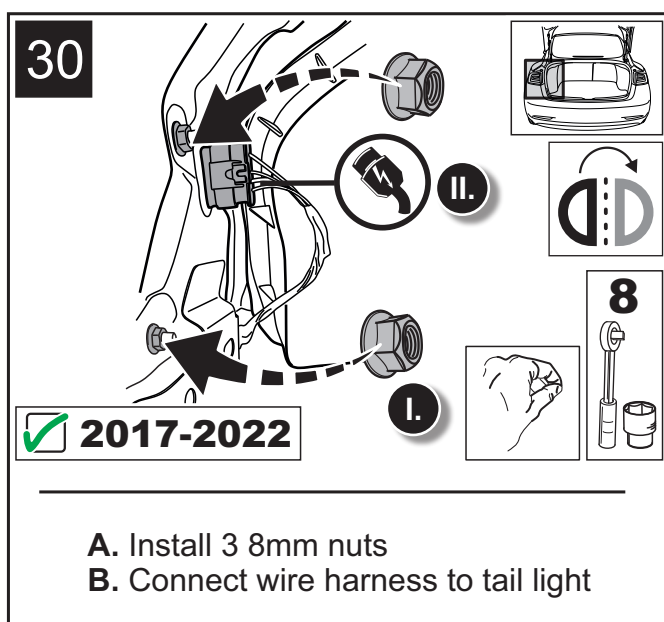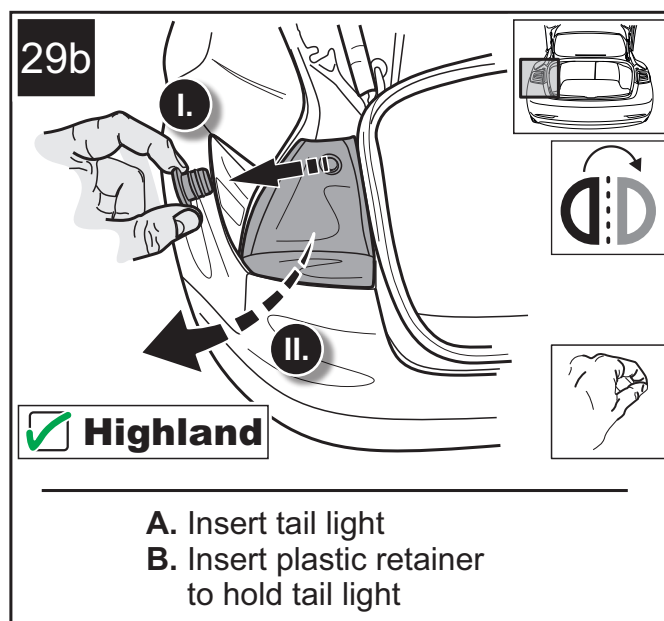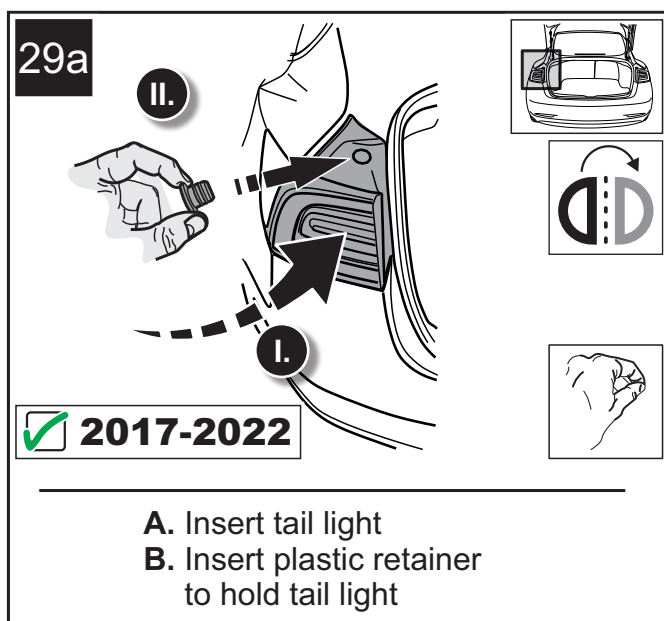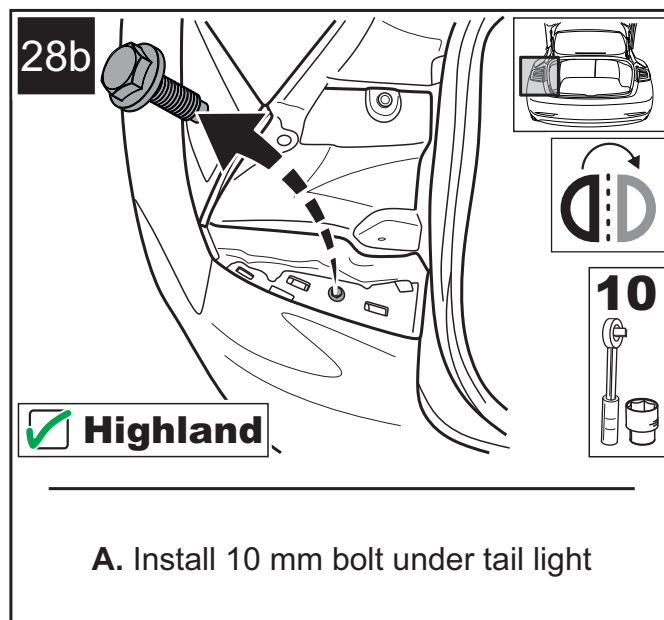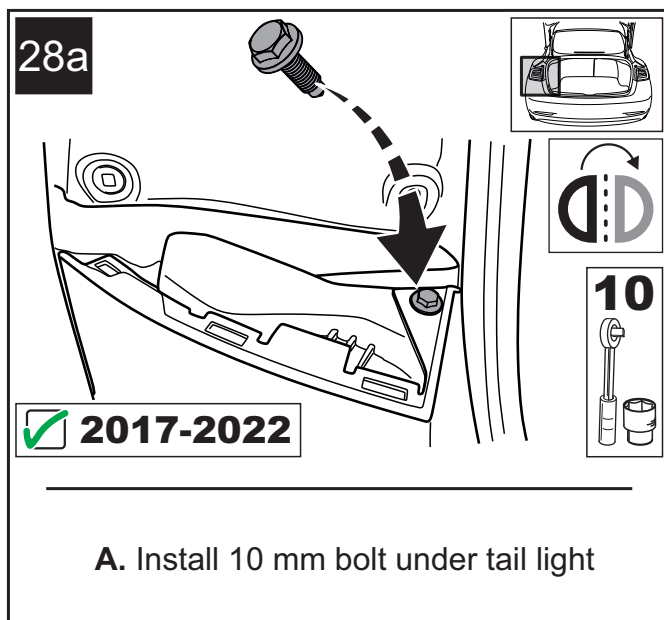

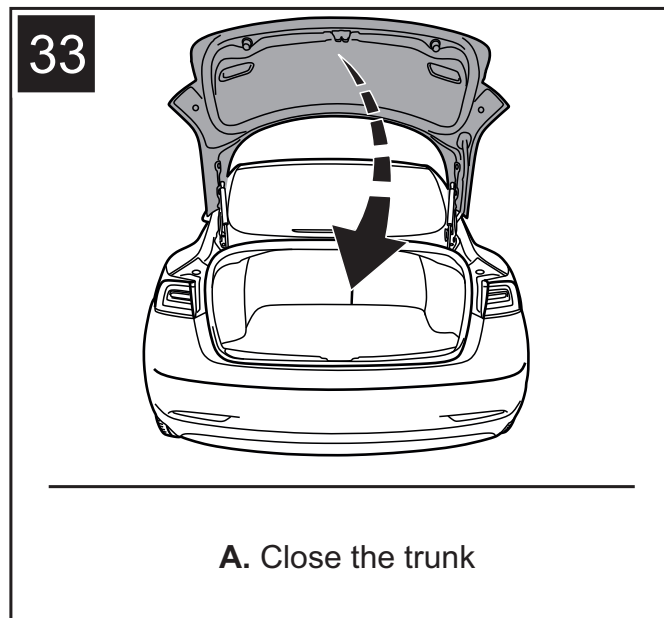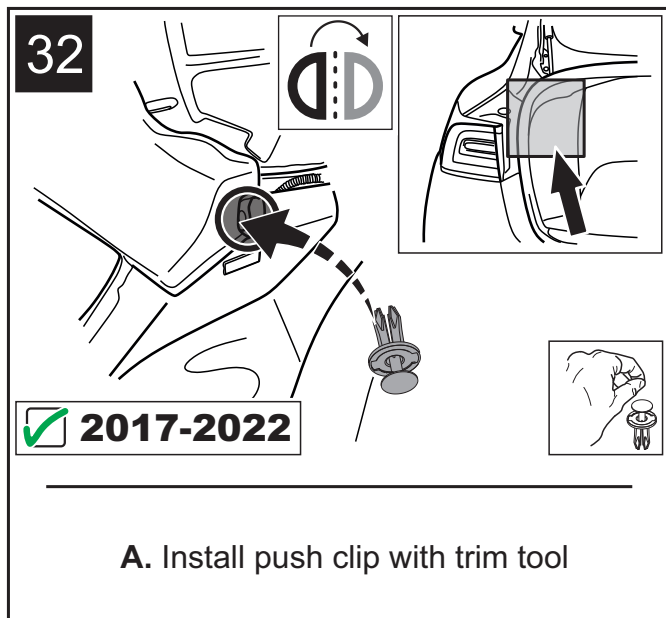

ORIS
ACPS

HELPLINE



www.oris-automotive.com/en/acps-automotive-aftermarket-worldwide

ORIS
ACPS